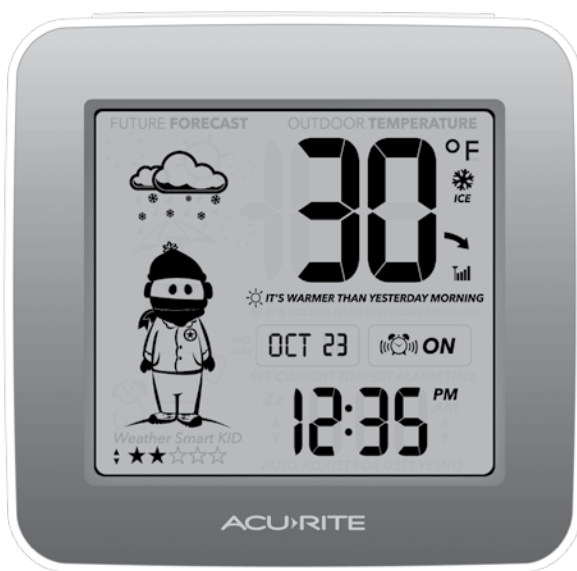 


**What-to-Wear Weather Station**

model 00777

**CONTENTS**

Unpacking Instructions .....	2	Operation .....	7
Package Contents .....	2	Using the Alarm .....	8
Product Registration.....	2	Troubleshooting .....	9
Features & Benefits: Sensor .....	2	Care & Maintenance .....	10
Features & Benefits: Display .....	3	Specifications.....	10
Setup .....	4	FCC Information .....	10
Install or Replace Batteries.....	4	Customer Support.....	11
Set Time & Date .....	5	Warranty.....	11
Placement Guidelines .....	6		

**Questions?** We're here to help!Visit us online at [www.acurite.com/support](http://www.acurite.com/support)**SAVE THIS MANUAL FOR FUTURE REFERENCE.**



Congratulations on your new AcuRite product. To ensure the best possible product performance, please read this manual in its entirety and retain it for future reference.

## Unpacking Instructions

Remove the protective film that is applied to the LCD screen prior to using this product. Locate the tab and peel off to remove.

## Package Contents

1. Display with Tabletop Stand
2. Outdoor Sensor
3. Instruction Manual

# IMPORTANT

PRODUCT MUST BE REGISTERED  
TO RECEIVE WARRANTY SERVICE

### PRODUCT REGISTRATION

Register online to receive 1-year warranty protection  
[www.acurite.com/product-registration](http://www.acurite.com/product-registration)

 
## Features & Benefits




### OUTDOOR SENSOR

- 1. Integrated Hanger**  
For easy placement.
- 2. Wireless Signal Indicator**  
Flashes when data is being sent to the display.
- 3. Battery Compartment Cover**

## Front of Display

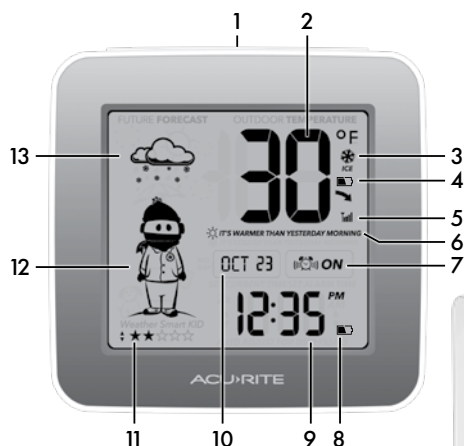

## Back of Display

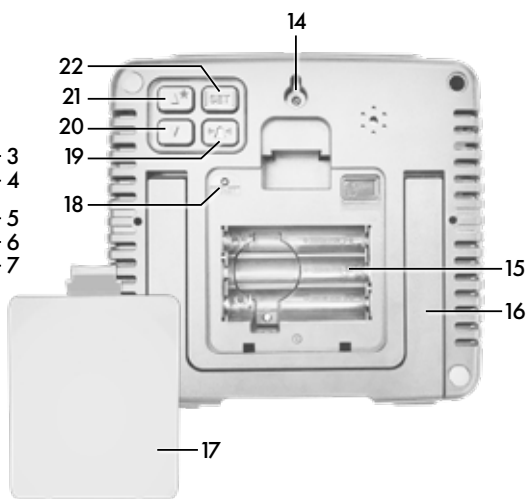 

## FRONT OF DISPLAY

### 1. LIGHT / SNOOZE button

For snooze function and to activate the momentary backlight for 5 seconds.

### 2. Current Outdoor Temperature

With trend arrow.

### 3. Freeze Alert Indicator

Indicates temperature is below freezing (32°F; 0°C).

### 4. Outdoor Sensor Low Battery Indicator

### 5. Outdoor Sensor Signal Strength

### 6. Yesterday Comparison

Indicates whether today is warmer or cooler than yesterday.

### 7. Alarm ON/OFF Indicator

### 8. Display Low Battery Indicator

### 9. Clock

### 10. Date

### 11. Weather Smart Kid Rewards

Rewards children for dressing themselves correctly with stars and fun graphics (see page 7).

### 12. What-to-Wear Character

Includes over 40 different clothing recommendations based on the weather forecast.

### 13. Weather Forecast 12 Hours in Advance

Self-Calibrating technology pulls data from the outdoor sensor to generate a hyperlocal, personalized forecast.

## BACK OF DISPLAY

### 14. Integrated Hanger

### 15. Battery Compartment

### 16. Display Stand

### 17. Battery Compartment Cover

### 18. Reset button

Full reset to factory defaults.

### 19. Bell Button

For alarm clock setup.

### 20. Down Arrow Button

For setup preferences.

### 21. Up Arrow Button

For setup preferences and adding a Weather Smart Kid star.

### 22. SET Button

For setup preferences.

## Install or Replace Batteries

AcuRite recommends high quality alkaline batteries for the best product performance. Heavy duty or rechargeable batteries are not recommended.

The outdoor sensor requires lithium batteries in low temperature conditions. Cold temperatures can cause alkaline batteries to function improperly. Use lithium batteries in the outdoor sensor for temperatures below  $-4^{\circ}\text{F}$  /  $-20^{\circ}\text{C}$ .



 
### Outdoor Sensor

1. Slide off the battery compartment cover.
2. Insert 2 x AA batteries into the battery compartment, as shown. Follow the polarity (+/-) diagram in the battery compartment.
3. Replace the battery cover.

**LITHIUM BATTERIES**  **$-40^{\circ}\text{F}$**  ( $-40^{\circ}\text{C}$ ) (70°C)  **$158^{\circ}\text{F}$**

**ALKALINE BATTERIES**  **$-4^{\circ}\text{F}$**  ( $-20^{\circ}\text{C}$ ) (70°C)  **$158^{\circ}\text{F}$**

## Display

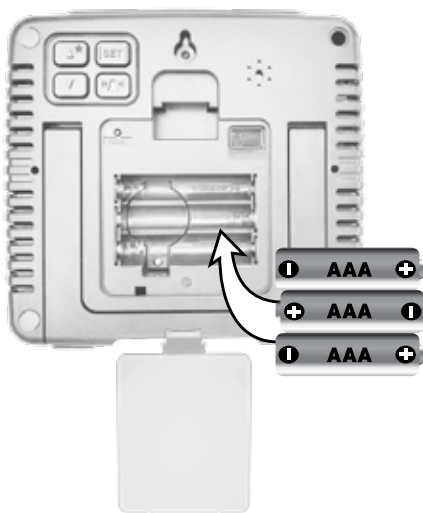

1. Slide off the battery compartment cover.
2. Insert 3 x AAA batteries into the battery compartment, as shown. Follow the polarity (+/-) diagram in the battery compartment.
3. Replace the battery cover.



**PLEASE DISPOSE OF OLD OR DEFECTIVE BATTERIES IN AN ENVIRONMENTALLY SAFE WAY AND IN ACCORDANCE WITH YOUR LOCAL LAWS AND REGULATIONS.**

**BATTERY SAFETY:** Clean the battery contacts and also those of the device prior to battery installation. Remove batteries from equipment which is not to be used for an extended period of time. Follow the polarity (+/-) diagram in the battery compartment. Promptly remove dead batteries from the device. Dispose of used batteries properly. Only batteries of the same or equivalent type as recommended are to be used. DO NOT incinerate used batteries. DO NOT dispose of batteries in fire, as batteries may explode or leak. DO NOT mix old and new batteries or types of batteries (alkaline/standard). DO NOT use rechargeable batteries. DO NOT recharge non-rechargeable batteries. DO NOT short-circuit the supply terminals.

## Set Time & Date

Press and hold the "SET" button, located on the back of the display, to enter SET MODE. Once in set mode, the preference you are currently setting will blink on the display.

To adjust the currently selected (flashing) item, press and release the "▲" or "▼" buttons.

To save your adjustments, press and release the "SET" button again to adjust the next preference. The preference set order is as follows:

CLOCK HOUR

CLOCK MINUTE

CALENDAR MONTH

CALENDAR DATE

CALENDAR YEAR

AUTO DST? (YES/NO)\*

TEMPERATURE UNITS (°F or °C)

\*If you live in an area that observes daylight saving time, DST should be set to YES, even if it is not currently daylight saving time.

You will automatically exit SET MODE if no buttons are pressed for 10 seconds. Enter setup mode at any time by pressing and holding the "SET" button.

## Placement for Maximum Accuracy

AcuRite sensors are sensitive to surrounding environmental conditions. Proper placement of both the display and outdoor sensor are critical to the accuracy and performance of this product.



### Display Placement

Place the display in a dry area free of dirt and dust. Display stands upright for tabletop use or is wall-mountable.

### Outdoor Sensor Placement

 
Sensor must be placed outside to observe outdoor conditions. Sensor is water resistant and is designed for general outdoor use, however, to extend its life place the sensor in an area protected from direct weather elements.

Hang the sensor using the integrated hang holes or hanger, or by using string (not included) to hang it from a suitable location, like a well covered tree branch. The best location is 4 to 8 feet above the ground with permanent shade and plenty of fresh air to circulate around the sensor.



## Important Placement Guidelines

- To ensure accurate temperature measurement, place units out of direct sunlight and away from heat sources or vents.
- Display and outdoor sensor must be within 165 ft (50 m) of each other.
- To maximize wireless range, place units away from large metallic items, thick walls, metal surfaces, or other objects that may limit wireless communication.
- To prevent wireless interference, place both units at least 3 ft (.9 m) away from electronic devices (TV, computer, microwave, radio, etc.)

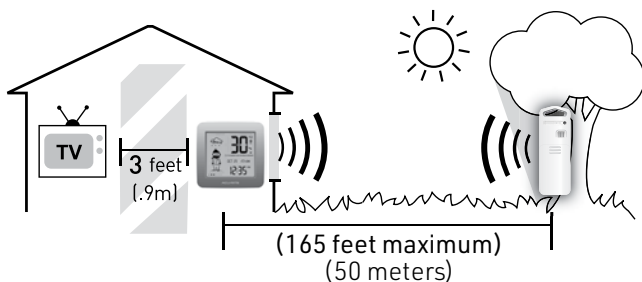







## Setup is Complete

The sensor will now synchronize with the display. It may take a few minutes for synchronization to complete. Please refer to the troubleshooting section of this manual if anything appears to be functioning improperly.

## Using the What-to-Wear Weather Station






### Weather Forecast

AcuRite's patented Self-Calibrating Forecasting provides your personal forecast of weather conditions for the next 12 to 24 hours by collecting data from the sensor in your backyard. It generates a forecast with pinpoint accuracy - personalized for your exact location.

RAIN/SNOW MIX LIKELY (windy)	SNOW LIKELY	LIGHT RAIN LIKELY	CLOUDY	PARTLY CLOUDY	SUNNY
					
(Lightning=Stormy)					

### What-to-Wear

Includes over 40 different clothing recommendations based on the weather forecast:

COLDER	MILD		WARMER	
				
HAT SCARF GLOVES HEAVY COAT LONG PANTS BOOTS	HAT GLOVES HEAVY COAT LONG PANTS BOOTS	SWEATSHIRT LONG PANTS SHOES	T-SHIRT LONG PANTS SHOES UMBRELLA	SUNGLASSES TANK TOP SHORTS SHOES

### Smart Weather Kid Rewards

Reward your Smart Weather Kid by virtually giving them a star on the display for every day they dress appropriately for the weather. Additionally, fun graphics (flowers, phone, dog, etc.) will appear with the character for further incentive.

To add a star, press and release the "▲" button while in normal operation mode. Only one star can be added per day. The stars will be cleared automatically the day after 5 stars are achieved.

To remove a star, press and hold the "▼" button for 5 seconds while in normal operation mode.

## Set the Alarm Time

To set the alarm time, press and HOLD the "🔔" button to enter ALARM SET MODE. To adjust the currently selected (flashing) item, press and release the "▲" or "▼" buttons. To save your adjustments, press and release the "SET" button to adjust the next preference. The preference set order is as follows:

ALARM CLOCK HOUR (Please note AM/PM indicator)

ALARM CLOCK MINUTE

You will automatically exit ALARM SET MODE if no buttons are pressed for 10 seconds. Enter ALARM SET MODE at any time by pressing and HOLDING the "🔔" button.

## Alarm Clock ON or OFF


Press and RELEASE the "🔔" button while in normal operation mode to turn the alarm clock on and off. Note the Alarm Indicator above the time on the display.

## Alarm Clock Snooze

The alarm clock will sound, gradually increasing in volume. When the alarm is sounding, press the "LIGHT/SNOOZE" button to activate the SNOOZE function for 10 minutes. The SNOOZE function can be activated up to 10 times.



# Troubleshooting

Problem	Possible Solution
<p><b>No outdoor sensor reception</b></p> 	<p>If the wireless signal indicator shows no bars:</p> <ul style="list-style-type: none"> <li>• Relocate the display and/or the outdoor sensor. The units must be within 165 ft (50 m) of each other.</li> <li>• Make sure both units are placed at least 3 feet (.9 m) away from electronics that may interfere with the wireless communication (such as TVs, microwaves, computers, etc).</li> <li>• Use standard alkaline batteries (or lithium batteries in sensor when temperature is below -4 °F/-20 °C). Do not use heavy duty or rechargeable batteries. NOTE: It may take up to 20 minutes for display and sensor to synchronize after batteries are replaced.</li> </ul>
<p><b>Outdoor temperature is flashing or showing dashes</b></p>	<p>Flashing of the outdoor temperature is generally an indication of wireless interference.</p> <ol style="list-style-type: none"> <li>1. Bring both the sensor and display indoors and remove at least one battery from each.</li> <li>2. Reinstall the battery in the outdoor sensor.</li> <li>3. Reinstall the battery in the display.</li> <li>4. Let the units sit within a couple feet of each other for about 20 minutes to gain a strong connection.</li> </ol>
<p><b>Inaccurate temperature</b></p>	<ul style="list-style-type: none"> <li>• Make sure both the display and sensor are placed out of direct sunlight and away from any heat sources or vents (see page 6).</li> <li>• Make sure both units are positioned away from moisture sources (see page 6).</li> </ul>
<p><b>Inaccurate forecast</b></p>	<ul style="list-style-type: none"> <li>• The Weather Forecast icon predicts conditions for the next 12 to 24 hours, not current conditions.</li> <li>• Allow unit to run continuously for 33 days. Battery removal or resetting the display will restart Learning Mode. After 14 days, forecast should be fairly accurate, however Learning Mode calibrates for a total of 33 days.</li> </ul>
<p><b>Display screen not working</b></p>	<ul style="list-style-type: none"> <li>• Check that the batteries are installed correctly. Batteries may need to be replaced.</li> </ul>

If your AcuRite product does not operate properly after trying the troubleshooting steps, visit [www.acurite.com/support](http://www.acurite.com/support)

# Care & Maintenance

## Display Care

Clean with a soft, damp cloth. Do not use caustic cleaners or abrasives. Keep away from dust, dirt and moisture. Clean ventilation ports regularly with a gentle puff of air.

## Outdoor Sensor Care

Clean with a soft damp cloth. Do not use caustic cleaners or abrasives.

## Specifications

<b>OUTDOOR TEMPERATURE RANGE</b>	-40°F to 158°F; -40°C to 70°C
<b>WIRELESS RANGE</b>	165 ft / 50 m depending on home construction materials
<b>WIRELESS FREQUENCY</b>	433 MHz
<b>POWER</b>	Display: 3 x AAA alkaline batteries Sensor: 2 x AA alkaline or lithium batteries
<b>DATA REPORTING</b>	30 seconds

## FCC Information

This device complies with part 15 of FCC rules. Operation is subject to the following two conditions:

- 1- This device may NOT cause harmful interference, and
- 2- This device must accept any interference received, including interference that may cause undesired operation.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user authority to operate the equipment.

This device complies with Industry Canada licence-exempt RSS standard(s).

Operation is subject to the following two conditions:

- (1) This device may not cause interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation of the device.

## Customer Support

AcuRite customer support is committed to providing you with best-in-class service. **For assistance**, please have the model number of this product available and visit [acurite.com/support](http://acurite.com/support)

- ▶ Installation Videos
- ▶ Register your Product
- ▶ Instruction Manuals
- ▶ Replacement Parts
- ▶ Submit Feedback & Ideas

# IMPORTANT

PRODUCT MUST BE REGISTERED  
TO RECEIVE WARRANTY SERVICE

## PRODUCT REGISTRATION

Register online to receive 1-year warranty protection  
[www.acurite.com/product-registration](http://www.acurite.com/product-registration)

## Limited 1-Year Warranty

AcuRite is a wholly owned subsidiary of Chaney Instrument Company. For purchases of AcuRite products, AcuRite provides the benefits and services set forth herein.

For purchases of Chaney products, Chaney provides the benefits and services set forth herein. We warrant that all products we manufacture under this warranty are of good material and workmanship and, when properly installed and operated, will be free of defects for a period of one year from the date of purchase.

Any product which, under normal use and service, is proven to breach the warranty contained herein within ONE YEAR from date of sale will, upon examination by us, and at our sole option, be repaired or replaced by us. Transportation costs and charges for returned goods shall be paid for by the purchaser. We hereby disclaim all responsibility for such transportation costs and charges. This warranty will not be breached, and we will give no credit for products which have received normal wear and tear not affecting the functionality of the product, been damaged (including by acts of nature), tampered, abused, improperly installed, or repaired or altered by others than our authorized representatives.

Remedy for breach of this warranty is limited to repair or replacement of the defective item(s). If we determine that repair or replacement is not feasible, we may, at our option, refund the amount of the original purchase price.

THE ABOVE-DESCRIBED WARRANTY IS THE SOLE WARRANTY FOR THE PRODUCTS AND IS EXPRESSLY IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED. ALL OTHER WARRANTIES OTHER THAN THE EXPRESS WARRANTY SET FORTH HEREIN ARE HEREBY EXPRESSLY DISCLAIMED, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTY OF MERCHANTABILITY AND THE IMPLIED WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE.

We expressly disclaim all liability for special, consequential, or incidental damages, whether arising in tort or by contract from any breach of this warranty. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

We further disclaim liability from personal injury relating to its products to the extent permitted by law. By acceptance of any of our products, the purchaser assumes all liability for the consequences arising from their use or misuse. No person, firm or corporation is authorized to bind us to any other obligation or liability in connection with the sale of our products. Furthermore, no person, firm or corporation is authorized to modify or waive the terms of this warranty unless done in writing and signed by a duly authorized agent of ours.

In no case shall our liability for any claim relating to our products, your purchase or your use thereof, exceed the original purchase price paid for the product.

### Applicability of Policy

This Return, Refund, and Warranty Policy applies only to purchases made in the United States and Canada. For purchases made in a country other than the United States or Canada, please consult the policies applicable to the country in which you made your purchase. Additionally, this Policy applies only to the original purchaser of our products. We do cannot and do not offer any return, refund, or warranty services if you buy products used or from resale sites such as eBay or Craigslist.

### Governing Law

This Return, Refund, and Warranty Policy is governed by the laws of the United States and the State of Wisconsin. Any dispute relating to this Policy shall be brought exclusively in the federal or State courts having jurisdiction in Walworth County, Wisconsin; and purchaser consents to jurisdiction within the State of Wisconsin.



**www.AcuRite.com**