

High Resolution Weather Station Display

model 06088



This product requires an AcuRite 5-in-1 Weather Sensor (sold separately) to be operational.

CONTENTS

Unpacking Instructions	2	Using the Weather Station	9
Package Contents	2	Expand the System.....	11
Product Registration	2	Troubleshooting	12
Wi-Fi Setup.....	3	Care & Maintenance.....	14
Features & Benefits.....	4	Specifications.....	14
Setup	7	FCC Information	14
Placement Guidelines	8	Customer Support	15
		Warranty.....	15

Questions? Contact Customer Support at www.AcuRite.com/support or email support@chaney-inst.com

SAVE THIS MANUAL FOR FUTURE REFERENCE.



Congratulations on your new AcuRite product. To ensure the best possible product performance, please read this manual in its entirety and retain it for future reference.

Unpacking Instructions

Remove the protective film that is applied to the LED screen prior to using this product. Peel off to remove.

Package Contents

1. Display with Tabletop Stand
2. Power Adapter
3. Mounting Bracket
4. Instruction Manual

IMPORTANT

PRODUCT MUST BE REGISTERED
TO RECEIVE WARRANTY SERVICE

PRODUCT REGISTRATION

Register online to receive 1 year warranty protection

www.AcuRite.com

Wi-Fi Setup for Weather Underground™ and Dark Sky Forecast

This weather station features wireless internet connectivity in order to connect and download forecasts from Dark Sky. You also have the option to share your weather data with Weather Underground, but this is not required to get a forecast.


- (OPTIONAL) If you do not already have a WU (Weather Underground™) account and would like to send your data to WU, please create your account at wunderground.com prior to following the next steps. To add this weather station to your WU account:
 - Sign in to your Weather Underground™ account.
 - Navigate to My Profile > My Weather Stations > Add New PWS.
 - Enter all required location info.
 - When prompted for “Station Hardware”, select “AcuRite Pro Weather Center”.
 - You will be provided with a WU Station ID and Station Key once you have submitted all required info (record for step 5, below).
- Power on the display using included power cord. If the unit has been powered on for more than 30 minutes, press and release the “” button to re-activate Wi-Fi setup. *
- Connect to the Wi-Fi signal (named AcuRite 06088M) of the AcuRite display from your computer or mobile device.
- Open your web browser on the device that is connected to the AcuRite display. Type “192.168.4.1” in the address bar and hit enter to access the AcuRite Wi-Fi display settings website (shown right).
- Select or enter your wireless network name and password. Fill in your country and postal code to download your 2-day forecast from Dark Sky. If you want to send data to Weather Underground, enter your Station ID and Station Key. Press “Save” to save your credentials.

NOTE: This weather station display only supports 2.4 GHz wireless networks.
- A Wi-Fi status message will appear confirming your connection to the display. If the connection was not successful, please verify your credentials and/or visit the Troubleshooting section (see page 13).
- Within an hour after the display is connected to Wi-Fi, forecasts from Dark Sky will be shown on your display. If you entered your WU credentials, data from your sensor will automatically begin to upload to Weather Underground™. Monitor sensor data remotely at www.wunderground.com or from a mobile device using the Weather Underground™ app, available from the iOS App Store or Google Play Store.

*In order to re-activate Wi-Fi setup, Wi-Fi needs to be set to ON. See “Connections” sub-menu (page 10).

Features & Benefits

Display

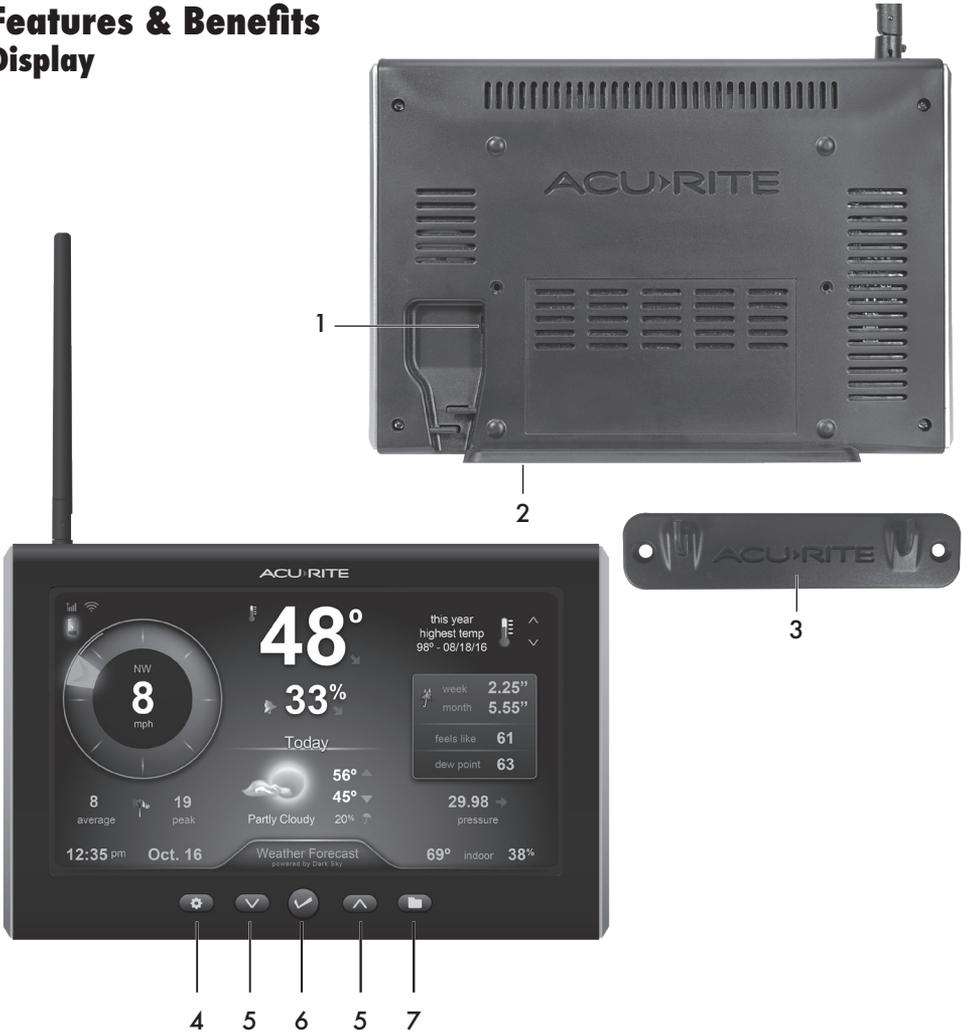

BACK OF DISPLAY

- 1. Plug-in for Power Adapter**
- 2. Display Stand**
- 3. Mounting Bracket**
For easy wall mounting.


FRONT OF DISPLAY

- 4. ⚙️ Button**
For menu access and setup preferences.

- 5. ▼ and ▲ Buttons**
For setup preferences and manually cycling through messages (see page 6).
- 6. ✓ Button**
For setup preferences.
- 7. 📁 Button**
For viewing high & low records.

Features & Benefits

Weather Overview Dashboard

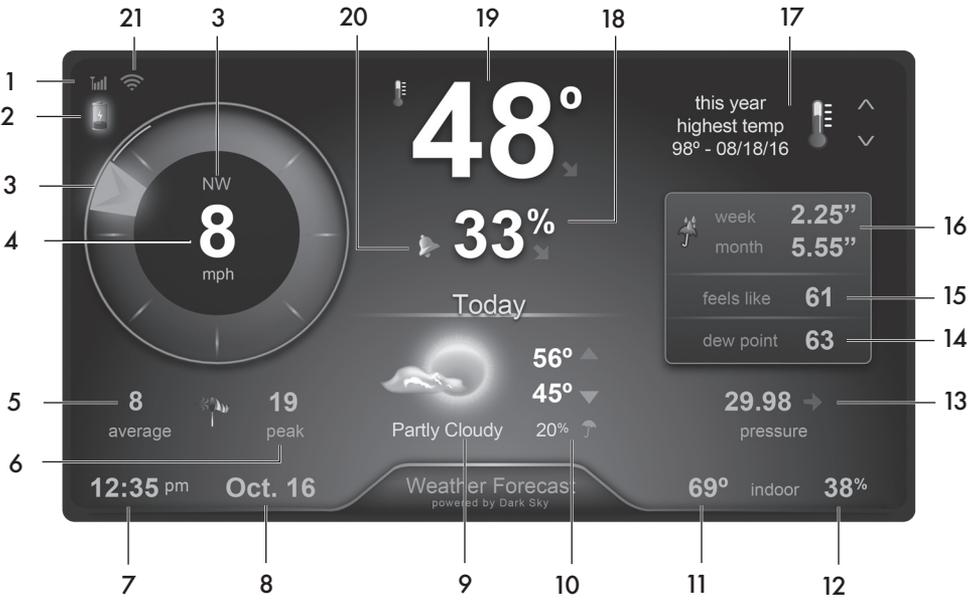

- 1. 5-in-1 Sensor Signal Strength**
- 2. Sensor Low Battery Indicator**
- 3. Current Wind Direction**
- 4. Current Wind Speed**
Background color changes based on current wind speed.
- 5. Average Wind Speed**
Average wind speed over the past 2 minutes.
- 6. Peak Wind Speed**
Highest speed from the last 60 minutes.
- 7. Clock**
- 8. Date**
- 9. Today's Forecast**
Includes forecasted high & low temperatures. Powered by Dark Sky when connected to Wi-Fi.
- 10. Chance of Rain Indicator**
Indicates the likelihood of rain when connected to Wi-Fi.
- 11. Current Indoor Temperature**
- 12. Current Indoor Humidity**
- 13. Barometric Pressure**
Arrow icon indicates direction pressure is trending.
- 14. Seasonal Information**
Heat Index calculation displays when temperature is 80°F (27°C) or higher
Dew Point calculation displays when temperature is 79°F (26°C) or lower.
Wind chill calculation displays when temperature is 40°F (4°C) or lower.
- 15. Current "Feels Like" Temperature**
- 16. Rainfall History**
Displays most recent rainfall and rainfall records for current week, month & year.
- 17. Messages**
Displays weather information and messages (see page 11).
- 18. Current Outdoor Humidity**
Arrow icon indicates direction humidity is trending.
- 19. Current Outdoor Temperature**
Arrow indicates direction temperature is trending.
- 20.  Alarm ON Indicator**
Indicates alarm is activated to emit an audible alert when conditions exceed your presets (see page 9).
- 21.  Icon**
Indicates display is connected to your wireless network in addition to the signal strength.
- 22. Tomorrow's Forecast**
(not shown)
Display automatically toggles between today and tomorrow's forecast, or press the  button to manually switch between forecasts. Includes forecasted high & low temperatures. Powered by Dark Sky when connected to Wi-Fi.

Display Setup

Plug Power Adapter into Electrical Outlet



Settings

After powering on for the first time, the display will automatically enter setup mode. Follow the on-screen instructions to set up the display.

To adjust the currently selected item, press and release the “^” or “v” buttons.

To save your adjustments, press and release the “✓” button again to adjust the next preference. The preference set order is as follows:

TIME ZONE (PST, MST, CST, EST, AST, HAST, NST, AKST)

AUTO DST (Daylight Saving Time YES or NO)*

CLOCK HOUR

CLOCK MINUTE

CALENDAR MONTH

CALENDAR DATE

CALENDAR YEAR

PRESSURE UNITS (inHg or hPa)

TEMPERATURE UNITS (°F or °C)

WIND SPEED UNITS (mph, km/h, knots)

RAINFALL UNITS (inches or mm)

DISTANCE UNITS (miles or kilometers)

AUTO DIM (YES or NO)**

AUTO CYCLE (OFF, 15 sec., 30 sec., 60 sec., 2 min., 5 min.)

ALERT VOLUME

*If you live in an area that observes Daylight Saving Time, DST should be set to YES, even if it is not currently Daylight Saving Time.

**For more information see page 11, under “Display”.

Enter setup mode at any time by pressing the “⚙” button to access the menu, then navigate to “Setup” and press and release the “✓” button.

Placement for Maximum Accuracy

AcuRite sensors are sensitive to surrounding environmental conditions. Proper placement of both the display and the sensor are critical to the accuracy and performance of this unit.



Display Placement

Place the display in a dry area free of dirt and dust. Display stands upright for tabletop use and is wall-mountable.

Important Placement Guidelines

- To ensure accurate temperature measurement, place units out of direct sunlight and away from any heat sources or vents.
- Display and sensor(s) must be within 330 feet (100 m) of each other.
- To maximize wireless range, place units away from large metallic items, thick walls, metal surfaces, or other objects that may limit wireless communication.
- To prevent wireless interference, place units at least 3 feet (.9 m) away from electronic devices (TV, computer, microwave, radio, etc.).

Using the Weather Station



Navigate to the main menu at any time by pressing the “⚙️” button. From the main menu, you can view records, set alarms, setup an additional sensor and more.

1. Records

Access the “Records” sub-menu to view high and low values recorded for each location by date and view trends for the sensor’s readings on a graphic chart.

2. Alarms

Access the “Alarms” sub-menu to set and edit alarm values, including temperature, humidity, wind speed and rainfall. The display also includes an alarm clock feature (time alarm) and storm alarm (activated when barometric pressure drops).

3. Setup

Access the “Setup” sub-menu to enter the initial setup process.

4. Display

Access the “Display” sub-menu to adjust display settings (brightness, contrast, tint), display mode (screen cycle) and backlight (auto dim, sleep mode).

When auto dim mode is activated in display setup, the backlight automatically dims the brightness based on the time of day. When “Sleep Mode” is activated, the display automatically dims during the timeframe you choose and shows only the most important readings for at-a-glance viewing.

AUTO DIM MODE: Automatically adjusts display brightness based on time of day.
6:00 a.m. - 9:00 p.m. = 100% brightness
9:01 p.m. - 5:59 a.m. = 15% brightness

5. Connections

Access the "Connections" sub-menu to add, remove or view information about a sensor, or enable Wi-Fi setup.

6. Units

Access the "Units" sub-menu to change measurement units for barometric pressure, temperature, wind speed, rainfall and distance.

7. Calibrate

Access the "Calibrate" sub-menu to adjust display or sensor data. First, select the display or sensor for which you wish to calibrate readings. Second, select the reading you wish to calibrate. Lastly, follow the on-screen prompts to adjust the value.

8. Factory Reset

Access the "Factory Reset" sub-menu to revert the display back to factory defaults. Follow the on-screen prompts to perform the reset.

Weather Forecast

While connected to Wi-Fi, weather forecasts for today and tomorrow are downloaded from Dark Sky. Dark Sky is one of the most accurate sources of hyperlocal weather information. It is backed by a wide range of weather data sources, which are aggregated together to provide the most accurate forecast possible for a given location. With down-to-the-minute forecasts, you'll know exactly when conditions will change so you can plan your day.

If the weather station is not connected to Wi-Fi, the forecast is generated using data from the outdoor sensor. Self-calibrating forecasting uses a unique algorithm to analyze changes in pressure over a time period (called Learning Mode) to determine your altitude. After 14 days, the self-calibrated pressure is tuned in to your location and the unit is ready for superior weather prediction.

Moon Phase

The moon phase is displayed between 7:00 p.m. to 5:59 a.m. when conditions allow for moon visibility. The phases of the moon are conveyed through simple lunar phase icons:



Expand the System

This weather station measures temperature, humidity, wind speed, wind direction and rainfall. The weather station can be expanded to include lightning detection by connecting a compatible AcuRite Lightning Sensor (optional; sold separately).

Compatible Sensor

Lightning Sensor
Model 06045



Compatible Lightning Sensor available at: www.AcuRite.com

NOTE: Access the "Connections" sub-menu to add sensor(s) to the display if being connected after initial setup.

Messages

This display shows real-time weather information and alert messages on the Weather Dashboard. Manually cycle through all available messages by pressing and releasing the " \wedge " or " \vee " buttons while viewing the Weather Overview dashboard.

Default messages are pre-loaded as follows:

HEAT INDEX - XX

WIND CHILL - XX

DEW POINT - XX

IT FEELS LIKE XX OUTSIDE

TODAY'S HIGH HUMIDITY . . . OUTDOOR XX / INDOOR XX

TODAY'S LOW HUMIDITY . . . OUTDOOR XX / INDOOR XX

TODAY'S HIGH TEMP. . . OUTDOOR XXX / INDOOR XXX

TODAY'S LOW TEMP. . . OUTDOOR XXX / INDOOR XXX

7 DAY HIGH TEMP. XX - MM/DD

7 DAY LOW TEMP. XX - MM/DD

30 DAY HIGH TEMP. XX - MM/DD

30 DAY LOW TEMP. XX - MM/DD

ALL TIME HIGH TEMP. XXX... RECORDED MM/DD/YY

ALL TIME LOW TEMP. XXX... RECORDED MM/DD/YY

24 HOUR TEMP. CHANGE +XX

ALL TIME HIGH WIND XX MPH... RECORDED MM/DD/YY

7 DAY AVERAGE WIND XX MPH

TODAY'S AVERAGE WIND XX MPH

NEW LOW TEMP. RECORD XX

NEW HIGH TEMP. RECORD XX

NEW WIND RECORD TODAY XX

5-IN-1 SENSOR BATTERIES LOW

5-IN-1 SENSOR SIGNAL LOST... CHECK BATTERIES AND PLACEMENT

CAUTION - HEAT INDEX IS XXX

CAUTION - WIND CHILL IS XXX

WARMEST DAY THIS WEEK

COLDEST DAY THIS WEEK

TODAY'S RAINFALL - XX

Troubleshooting

Problem	Possible Solution
<p data-bbox="133 402 285 431">No reception</p>  no bars	<ul style="list-style-type: none"> • Relocate the display and/or the 5-in-1 sensor. The units must be within 330 ft (100 m) of each other. • Make sure both units are placed at least 3 feet (.9 m) away from electronics that may interfere with the wireless communication (such as TVs, microwaves, computers, etc). • Use standard alkaline batteries (or lithium batteries in sensor when temperature is below -20°C/-4°F). Do not use heavy duty or rechargeable batteries. NOTE: It may take a few minutes for display and sensor to synchronize after batteries are replaced. • Synchronize the units: <ol style="list-style-type: none"> 1. Bring both the sensor and display indoors and remove power adapter/batteries from each. 2. Reinstall batteries in outdoor sensor. 3. Reinstall power adapter in display. 4. Let the units sit within a couple feet of each other for a few minutes to gain a strong connection.
<p data-bbox="114 786 306 846">Temperature is showing dashes</p>	<p>When the outdoor temperature is showing dashes, it may be an indication of wireless interference between the sensor and display.</p> <ul style="list-style-type: none"> • Re-add sensor to display by accessing the “Connections” sub-menu (see page 10).
<p data-bbox="96 1037 323 1066">Inaccurate forecast</p>	<ul style="list-style-type: none"> • Confirm there is a Wi-Fi connection.  icon should be displayed above the forecast. If the  icon is displayed, refer to “Display not connecting to Wi-Fi” section (page 13). • Today and tomorrow’s forecast is downloaded from Dark Sky when connected to Wi-Fi*, so be sure the postal code was entered correctly during Wi-Fi setup. <p>*If the display is not connected to Wi-Fi, the forecast will be generated using the outdoor sensor. Refer to “Inaccurate temperature or humidity” section below.</p>
<p data-bbox="114 1325 304 1385">Inaccurate wind readings</p>	<ul style="list-style-type: none"> • What is wind reading being compared to? Pro weather stations are typically mounted at 30 ft (9 m) high or more. Make sure to compare data using a sensor positioned at the same mounting height. • Check location of the sensor. Ensure it’s mounted a minimum of 5 ft (1.5 m) in the air with no obstructions around it (within several feet). • Ensure wind cups are spinning freely. If they hesitate or stop try lubricating with graphite powder or spray lubricant.

Problem	Possible Solution
Inaccurate temperature or humidity	<ul style="list-style-type: none"> • Make sure both the display and 5-in-1 sensor are placed away from any heat sources or vents (see page 8). • Make sure both units are positioned away from moisture sources (see page 8). • Make sure 5-in-1 sensor is mounted at least 1.5 m (5 ft) off of the ground. • Calibrate indoor and outdoor temperature and humidity (see “Calibrate” on page 10).
Display screen not working	<ul style="list-style-type: none"> • Check that the power adapter is plugged into the display and an electrical outlet.
Display not connecting to Wi-Fi	<ul style="list-style-type: none"> • Your internet router and display must be within range of each other. Relocate your display closer to your router. • Ensure the network name (SSID) and password you’ve entered are correct. NOTE: Both network name and password are case sensitive. • Make sure DHCP is enabled on your router. Most routers have DHCP enabled by default. • Ensure your router is broadcasting a 2.4 GHz network. The weather station display is equipped with a Wi-Fi module that only supports 2.4 GHz wireless networks.
Data not uploading to Weather Underground™	<ul style="list-style-type: none"> • Navigate to “192.168.4.1” in your web browser. Confirm that your Station ID and Station Key are entered correctly.
Can’t load Wi-Fi setup page	<ul style="list-style-type: none"> • Verify your computer or mobile device is still connected to the display’s Wi-Fi. Reconnect if necessary.

If your AcuRite product does not operate properly after trying the troubleshooting steps, visit www.AcuRite.com/support or email support@chaney-inst.com for assistance.

Care & Maintenance

Display Care

Clean with a soft, damp cloth. Do not use caustic cleaners or abrasives. Keep away from dust, dirt and moisture. Clean ventilation ports regularly with a gentle puff of air.

Specifications

DISPLAY'S BUILT-IN TEMPERATURE SENSOR RANGE	32°F to 122°F; 0°C to 50°C
DISPLAY'S BUILT-IN HUMIDITY SENSOR RANGE	1% to 99%
OPERATING FREQUENCY	433 MHz
POWER	5V power adapter
DATA REPORTING	Display: Indoor temperature & humidity: 60 second updates
WIFI	Weather Underground™ and Dark Sky connectivity require an active 2.4 GHz broadband internet connection

FCC Information

This device complies with part 15 of FCC rules. Operation is subject to the following two conditions:

- 1- This device may NOT cause harmful interference, and
- 2- This device must accept any interference received, including interference that may cause undesired operation.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user authority to operate the equipment.

This device complies with Industry Canada licence-exempt RSS standard(s).

Operation is subject to the following two conditions:

- (1) This device may not cause interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation of the device.

Customer Support

AcuRite customer support is committed to providing you with best-in-class service. **For assistance**, please have the model number of this product available and contact us in any of the following ways:



support@chaney-inst.com

Visit us at www.AcuRite.com

- ▶ Installation Videos
- ▶ Register your Product
- ▶ Instruction Manuals
- ▶ Support User Forum
- ▶ Replacement Parts
- ▶ Submit Feedback & Ideas

IMPORTANT

PRODUCT MUST BE REGISTERED
TO RECEIVE WARRANTY SERVICE

PRODUCT REGISTRATION

Register online to receive 1 year warranty protection

www.AcuRite.com

Limited 1-Year Warranty

AcuRite is a wholly owned subsidiary of Chaney Instrument Company. For purchases of AcuRite products, AcuRite provides the benefits and services set forth herein. For purchases of Chaney products, Chaney provides the benefits and services set forth herein.

We warrant that all products we manufacture under this warranty are of good material and workmanship and, when properly installed and operated, will be free of defects for a period of one year from the date of purchase.

Any product which, under normal use and service, is proven to breach the warranty contained herein within ONE YEAR from date of sale will, upon examination by us, and at our sole option, be repaired or replaced by us. Transportation costs and charges for returned goods shall be paid for by the purchaser. We hereby disclaim all responsibility for such transportation costs and charges. This warranty will not be breached, and we will give no credit for products which have received normal wear and tear not affecting the functionality of the product, been damaged (including by acts of nature), tampered, abused, improperly installed, or repaired or altered by others than our authorized representatives.

Remedy for breach of this warranty is limited to repair or replacement of the defective item(s). If we determine that repair or replacement is not feasible, we may, at our option, refund the amount of the original purchase price.

THE ABOVE-DESCRIBED WARRANTY IS THE SOLE WARRANTY FOR THE PRODUCTS AND IS EXPRESSLY IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED. ALL OTHER WARRANTIES OTHER THAN THE EXPRESS WARRANTY SET FORTH HEREIN ARE HEREBY EXPRESSLY DISCLAIMED, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTY OF MERCHANTABILITY AND THE IMPLIED WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE.

We expressly disclaim all liability for special, consequential, or incidental damages, whether arising in tort or by contract from any breach of this warranty. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

We further disclaim liability from personal injury relating to our products to the extent permitted by law. By acceptance of any of our products, the purchaser assumes all liability for the consequences arising from their use or misuse. No person, firm or corporation is authorized to bind us to any other obligation or liability in connection with the sale of our products. Furthermore, no person, firm or corporation is authorized to modify or waive the terms of this warranty unless done in writing and signed by a duly authorized agent of ours.

In no case shall our liability for any claim relating to our products, your purchase or your use thereof, exceed the original purchase price paid for the product.

Applicability of Policy

This Return, Refund, and Warranty Policy applies only to purchases made in the United States and Canada. For purchases made in a country other than the United States or Canada, please consult the policies applicable to the country in which you made your purchase.

Additionally, this Policy applies only to the original purchaser of our products. We cannot and do not offer any return, refund, or warranty services if you buy products used or from resale sites such as eBay or Craigslist.

Governing Law

This Return, Refund, and Warranty Policy is governed by the laws of the United States and the State of Wisconsin. Any dispute relating to this Policy shall be brought exclusively in the federal or State courts having jurisdiction in Walworth County, Wisconsin; and purchaser consents to jurisdiction within the State of Wisconsin.

ACU RITE®



Weather
Stations



Temperature
& Humidity



Weather
Alert Radio



Kitchen
Thermometers
& Timers



Clocks

It's more than accurate, it's **ACU RITE**.

AcuRite offers an extensive assortment of precision instruments, designed to provide you with information you can depend on to Plan your day with confidence™.

www.AcuRite.com