

## SETUP REQUIRES:

- Display
- Power Adapter (3 AAA backup batteries recommended)
- AcuRite Iris (5-in-1) Sensor (may be sold separately)

### 1 PLUG IN DISPLAY AND CONFIGURE SETTINGS

Plug in the power adapter. Once the display is powered on, configuration will begin automatically. Use the Up and Down arrows to select between options, and press the set button to confirm your selections.

- |                                     |                               |                                       |
|-------------------------------------|-------------------------------|---------------------------------------|
| • RF Channel (A-B-C; A recommended) | • Clock Minute                | • Wind Speed Units (mph, km/h, knots) |
| • Auto DST (ON / OFF)               | • Calendar Month              | • Rainfall Units (inches / mm)        |
| • 12 or 24 Hour Clock Display       | • Calendar Date               | • Pressure Units (inHg / hPa)         |
| • Clock Hour                        | • Calendar Year               |                                       |
|                                     | • Temperature Units (°F / °C) |                                       |

You can configure these settings at any time by pressing the set button.

### 2 INSTALL SENSOR BATTERIES


In the outdoor sensor battery compartment, install four AA alkaline or lithium batteries. The Display should automatically sync with the sensor and start showing readings within a minute.

*NOTE: In the battery compartment of the sensor, there is a small switch A-B-C switch that should match the selection on the Display. By default this is "A" and doesn't need adjustment.*

### 3 MOUNT SENSOR

Find a suitable place to mount the outdoor sensor.

- At least 5 feet (1.5 meters) off the ground
- Front solar cell facing south
- Away from heat and humidity sources
- Level for accurate rain reporting using bubble level on top of sensor

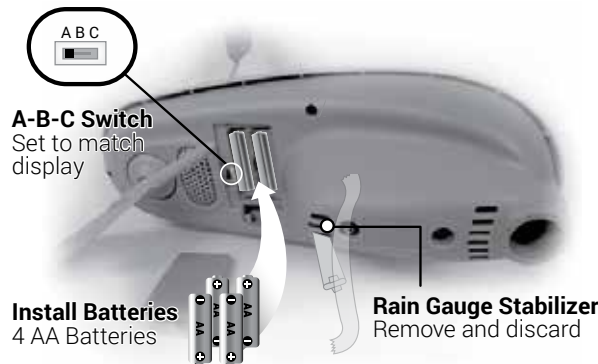

Once the sensor is mounted, remove the rain gauge stabilizer from sensor.



## Connect to My AcuRite® with Wi-Fi

### SETUP REQUIRES:

- Display and AcuRite Iris Sensor
- 2.4 GHz Wireless Network
- Phone, Tablet, or Computer with Wi-Fi

#### 1 CONNECT TO DISPLAY WI-FI

Connect to the Wi-Fi signal coming from your Display using your phone or Wi-Fi compatible device.

#### 2 ACCESS WI-FI SETUP PAGE

Open a web browser on your device. Type "192.168.4.1" in the address bar and hit enter to access the AcuRite Wi-Fi display settings website.

#### 3 ADD YOUR WI-FI CREDENTIALS

Select your Wi-Fi network name and enter your network password. Press "Save". Once your credentials are successfully entered, reconnect to your normal Wi-Fi.


#### 4 SET UP YOUR MY ACURITE ACCOUNT

Download the My AcuRite mobile app or visit [www.myacurite.com](http://www.myacurite.com) to complete setup.

### ADDITIONAL NOTES

The Wi-Fi set up page is available for 30 minutes after the display is powered on. Press the set button to re-activate the setup page at any time.

To retain Wi-Fi configuration details, backup batteries are strongly recommended in the display. The display can be power cycled at any time to clear Wi-Fi credentials.

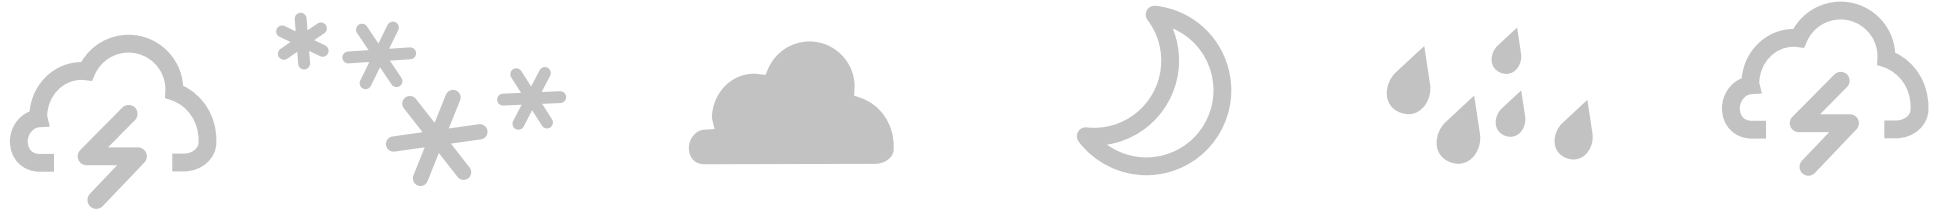

# Quick Setup Guide 06101M

WE'RE HERE TO HELP!

For support, visit [acurite.com/support](http://acurite.com/support).

Full product manuals, warranty, and FCC statement available on [acurite.com](http://acurite.com).

Register your product for a one-year limited warranty at:  
[acurite.com/product-registration](http://acurite.com/product-registration)

