

AcuRite Iris® Mini Display

model 06106



CONTENTS

Package Contents	2	Care & Maintenance	8
Product Registration.....	2	Calibration	8
Features & Benefits.....	3	Troubleshooting	9
Setup	5	Specifications	10
Set the Time, Date & Units	6	Customer Support.....	11
Placement Guidelines	6	Warranty.....	11
Operation	7	FCC Information	11
Alarm Setup	8		

Questions? We're here to help!

Visit us online at www.acurite.com/support

SAVE THIS MANUAL FOR FUTURE REFERENCE.



Congratulations on your new AcuRite product! To ensure the best possible product performance, please read this manual in its entirety and retain it for future reference.

Unpacking Instructions

Remove the protective film that is applied to the LCD screen prior to using this product. Locate the tab and peel off to remove.

Package Contents

1. Display with Tabletop Stand
2. Instruction Manual

This product requires an AcuRite Iris® Weather Sensor to be operational (sold separately).

IMPORTANT

PRODUCT MUST BE REGISTERED
TO RECEIVE WARRANTY SERVICE

PRODUCT REGISTRATION

Register online to receive 1-year warranty protection
www.acurite.com/product-registration

Features & Benefits

Front of Display



1. Current Outdoor Temperature

2. Records Button

Press to cycle through available daily and all-time records.

3. Current Outdoor Humidity

4. Current Wind Direction

5. Current Wind Speed

6. Outdoor Sensor Signal Strength

7. Outdoor Sensor Low Battery Indicator

8. Current Rainfall Total

9. Date

10. Display Low Battery Indicator

11. Time

12. Current Indoor Temperature

13. Current Barometric Pressure

Arrow indicates the direction the pressure is trending.

14. Weather Forecast for Next 12-24 Hours

Self-calibrating technology pulls data from the outdoor sensor to generate a hyperlocal, personalized forecast.

15. Learning Mode Icon

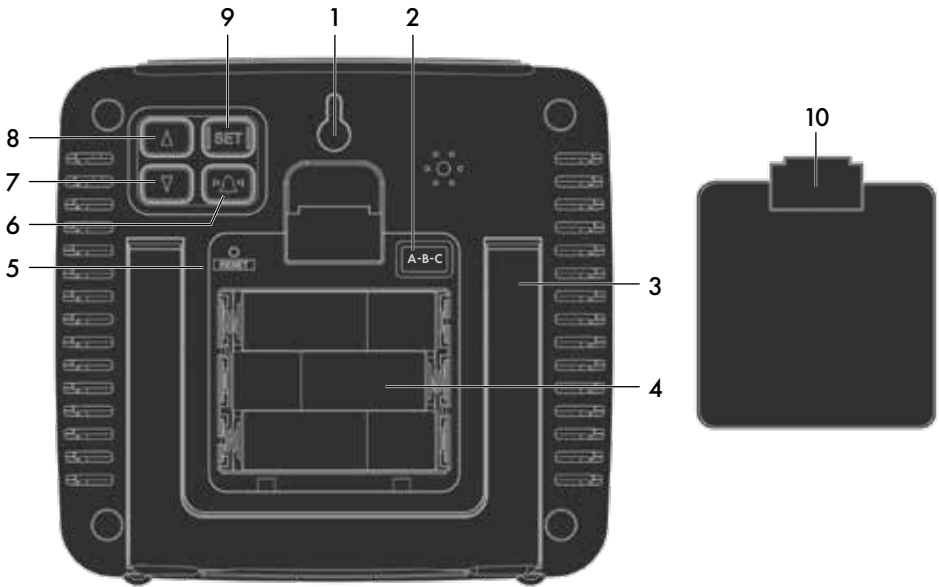
Disappears after weather forecast self-calibration is complete (approximately 14 days).

16. Freeze Alert Indicator

Indicates temperature is at or below freezing (32°F; 0°C).

Features & Benefits

Back of Display



1. Integrated Hanger

For easy wall mounting.

2. A-B-C Switch

ID code that must match sensor's A-B-C switch to ensure units synchronize.

3. Display Stand

4. Battery Compartment

5. RESET Button

Press and release to clear historical record.
Press and hold for 10 seconds for full reset to factory defaults.

6. "🔔" Alarm Button

To enter alarm setup mode.

7. ▼ Button

For setup preferences.

8. ▲ Button

For setup preferences.

9. SET Button

For setup preferences.

10. Battery Compartment Cover

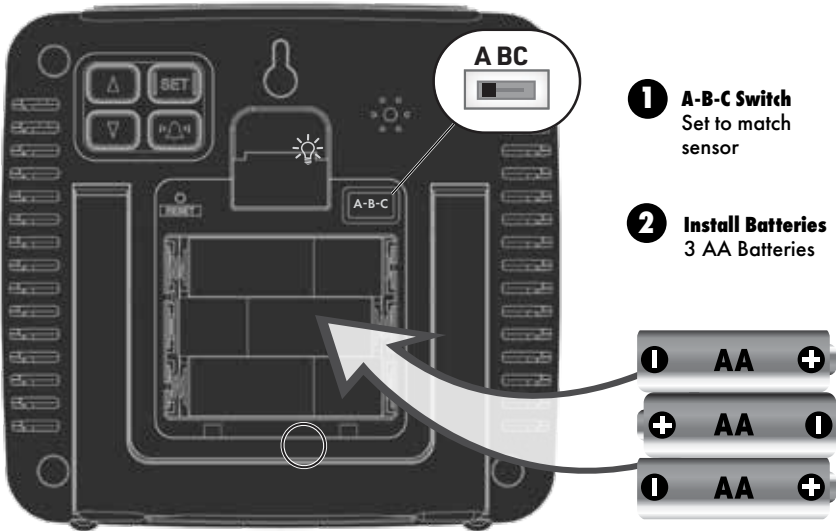
Display Setup

1 Set the A-B-C Switch

Locate the A-B-C switch inside the battery compartment. Set the A-B-C switch to A, B or C. You must select the same letter choices for both the display and the sensor in order for the units to synchronize.

2 Install or Replace Batteries

1. Remove the battery compartment cover.
2. Insert 3 x AA batteries (not included) into the battery compartment, as shown. Follow the polarity (+/-) diagram in the battery compartment.
3. Replace the battery cover.



1 A-B-C Switch
Set to match sensor

2 Install Batteries
3 AA Batteries



PLEASE DISPOSE OF OLD OR DEFECTIVE BATTERIES IN AN ENVIRONMENTALLY SAFE WAY AND IN ACCORDANCE WITH YOUR LOCAL LAWS AND REGULATIONS.

BATTERY SAFETY: Clean the battery contacts and also those of the device prior to battery installation. Remove batteries from equipment which is not to be used for an extended period of time. Follow the polarity (+/-) diagram in the battery compartment. Promptly remove dead batteries from the device. Dispose of used batteries properly. Only batteries of the same or equivalent type as recommended are to be used. DO NOT incinerate used batteries. DO NOT dispose of batteries in fire, as batteries may explode or leak. DO NOT mix old and new batteries or types of batteries (alkaline/standard). DO NOT use rechargeable batteries. DO NOT recharge non-rechargeable batteries. DO NOT short-circuit the supply terminals.

Set the Time, Date & Units

Press and release the "SET" button, located on the back of the display, to enter SET MODE. Once in set mode, the preference you are currently setting will blink on the display.

To adjust the currently selected (flashing) item, press and release the "▲" or "▼" buttons (press and HOLD to fast adjust).

To save your adjustments, press and release the "SET" button again to adjust the next preference. The preference set order is as follows:

CLOCK HOUR

CLOCK MINUTE

CALENDAR MONTH

CALENDAR DATE

CALENDAR YEAR

UNITS SCALE (U.S. standard or metric)

- U.S. Standard: Temperature (F), Wind speed (mph), Rainfall (inches), Pressure (inHg)
- Metric: Temperature (C), Wind speed (km/h), Rainfall (mm), Pressure (hPa)

You will automatically exit SET MODE if no buttons are pressed for 10 seconds. Enter SET MODE at any time by pressing the "SET" button.

Placement for Maximum Accuracy

AcuRite sensors are sensitive to surrounding environmental conditions. Proper placement of both the display and the outdoor sensor are critical to the accuracy and performance of this product.

Display Placement

Place the display in a dry area free of dirt and dust. Display stands upright for tabletop use or is wall-mountable.

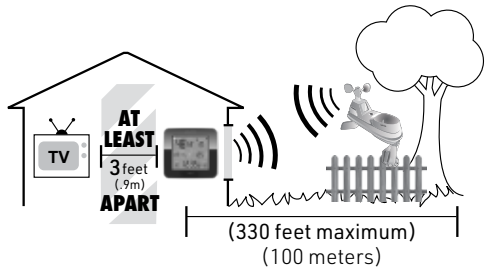


Outdoor Device Placement

For optimal performance and the most accurate readings, follow the instructions included with the AcuRite Iris® (5-in-1).

Important Placement Guidelines

- To ensure accurate temperature measurement, place units out of direct sunlight and away from any heat sources or vents.
- Display and outdoor sensor must be within 330 ft (100 m) of each other.
- To maximize wireless range, place units away from large metallic items, thick walls, metal surfaces, or other objects that may limit wireless communication.
- To prevent wireless interference, place both units at least 3 ft (90 cm) away from electronic devices (TV, computer, microwave, radio, etc.).



Setup is Complete

The sensor will now synchronize with the display. It may take a few minutes for synchronization to complete. Please refer to the troubleshooting section of this manual if anything appears to be functioning improperly.






Using the AcuRite Iris® Mini Display

Learning Mode

Self-calibrating forecasting uses a unique algorithm to analyze changes in pressure over a time period (called Learning Mode) to determine your altitude. After 14 days, the Learning Mode icon disappears from the display screen. At this point, the self-calibrated pressure is tuned in to your location and the unit is ready for superior weather prediction.

Weather Forecast

AcuRite's patented self-calibrating forecasting provides your personal forecast of weather conditions for the next 12 to 24 hours by collecting data from the sensor in your backyard. It generates a forecast with pinpoint accuracy - personalized for your exact location.

<p>STORMY & WINDY</p>  <p>(flashing = stormy)</p>	<p>SNOW LIKELY</p> 	<p>SNOW / RAIN MIX LIKELY</p>  <p>(flashing)</p>	<p>RAIN LIKELY</p> 	<p>CLOUDY</p> 
---	---	--	---	--

Barometric Pressure

Subtle variations in barometric pressure greatly affect the weather. This weather station displays the current pressure with an arrow icon to indicate the direction the pressure is trending (FALLING, STEADY, or RISING).

Rainfall Tracking

This weather station features enhanced tracking of historical rainfall data. Rain accumulation data is recorded for today, yesterday, past week, past month, and past year.

While in normal operation mode, press and release the "▲" or "▼" buttons to cycle through historical rainfall records.

High & Low Records




 


 


Today's high and low records are displayed for indoor temperature and outdoor temperature and humidity.. Today's records automatically clear at 12:00 am midnight every day.

Press the "RECORDS" button to cycle through high and low recorded values for outdoor temperature, humidity, and wind speed maximum for today and all-time.




 


Programmable Alarms

 
This display features programmable alarms that sound an alert to notify you when a value (for outdoor temperature, humidity, wind speed or rainfall) has been reached or exceeded. When an alarm is triggered, the display emits an audible beep and flashes data in the affected category. You can customize the alarms by turning ON or OFF the alarms you'd like activated or deactivated, and by inputting your own values to trigger the alarm.

 
Setup an Alarm

1. Press and release the " " button until the reading for which you wish to set an alarm is shown on the display. " " will be shown.
2. Press and release the " " or " " buttons until " " appears.
3. Press and release the "SET" button. The current alarm value will flash on the display.
4. Press and release the " " or " " buttons to adjust the alarm's value.
5. Press and release the " " button to save the alarm value.
6. Press and release the " " button to cycle to the next reading.

Disable an Alarm

1. Press and release the " " button until the reading for which you wish to disable an alarm is shown on the display. " " will be shown.
2. Press and release the " " or " " buttons until " " appears.
3. Press and release the " " button to cycle to the next reading.
4. Repeat steps 1-3, as needed.

NOTE: To disable ALL alarms at once, press and HOLD the " " button for 10 seconds.

You will automatically exit alarm SET MODE if no buttons are pressed for 10 seconds. Enter alarm SET MODE at any time by pressing the " " button.

 

 

 
Care & Maintenance

Display Care

Clean with a soft, damp cloth. Do not use caustic cleaners or abrasives. Keep away from dust, dirt and moisture. Clean ventilation ports regularly with a gentle puff of air.

Calibration

The outdoor temperature and humidity, indoor temperature, and barometric pressure can be calibrated on the display to improve accuracy. Calibration can improve accuracy when sensor placement or environmental factors impact the data accuracy.

1. To access calibration mode, press " ", "SET" and " " buttons simultaneously for at least 5 seconds.
2. To adjust the currently selected (flashing) item, press and release the " " or " " buttons to calibrate the data value higher or lower from the actual reading.
3. To save your adjustments, press and release the "SET" button to adjust the next preference. The " " icon will remain illuminated next to calibrated values.

The preference set order is as follows:

OUTDOOR TEMPERATURE
OUTDOOR HUMIDITY
INDOOR TEMPERATURE


BAROMETRIC PRESSURE
(must be set to MANUAL mode to calibrate) *

*To change from AUTO to MANUAL pressure mode and vice versa, press AND HOLD the "SET" button for at least 10 seconds. The display indicates the current pressure mode selected, "AUTO" or "MANUAL".

After 20 seconds of inactivity, the display will save the adjustments and exit calibration mode.

NOTE: Calibrations will be erased if the display is reset or if batteries are removed.

Troubleshooting

Problem	Possible Solution
<p data-bbox="93 256 292 316">No outdoor sensor reception</p>  no bars	<p data-bbox="345 154 776 178">If the wireless signal indicator shows no bars:</p> <ul data-bbox="356 186 984 462" style="list-style-type: none"> • Relocate the display and/or the outdoor sensor. The units must be within 330 ft (100 m) of each other. • Make sure both units are placed at least 3 feet (.9 m) away from electronics that may interfere with the wireless communication (such as TVs, microwaves, computers, etc.). • Use standard alkaline batteries (or lithium batteries in sensor when temperature is below -4 °F/-20 °C). Do not use heavy-duty or rechargeable batteries. NOTE: It may take a few minutes for display and sensor to synchronize after batteries are replaced.
<p data-bbox="106 544 281 665">Outdoor temperature is flashing or showing dashes</p>	<p data-bbox="345 487 962 535">Flashing of the outdoor temperature is generally an indication of wireless interference.</p> <ol data-bbox="367 544 1000 722" style="list-style-type: none"> 1. Bring both the sensor and display indoors and remove batteries from each. 2. Make sure the A-B-C switches on both units match. 3. Reinstall batteries in the outdoor sensor. 4. Reinstall batteries in the display. 5. Let the units sit within a couple feet of each other for a few minutes to gain a strong connection.
<p data-bbox="90 860 292 885">Inaccurate forecast</p>	<ul data-bbox="356 755 1005 998" style="list-style-type: none"> • Weather Forecast icon predicts conditions for the next 12 to 24 hours, not current conditions. • Has Learning Mode icon disappeared from the display? Learning Mode must complete before forecast and pressure will be accurate. • Allow unit to run continuously for 33 days. Battery removal or resetting the display will restart Learning Mode. After 14 days, forecast should be fairly accurate, however Learning Mode calibrates for a total of 33 days.
<p data-bbox="122 1031 260 1120">Inaccurate temperature or humidity</p>	<ul data-bbox="356 1023 1005 1128" style="list-style-type: none"> • Make sure both the display and sensor are placed out of direct sunlight and away from any heat sources or vents (see page 6). • Make sure both units are positioned away from moisture sources (see page 6).
<p data-bbox="133 1274 250 1307">No rainfall</p>	<ul data-bbox="356 1161 1005 1429" style="list-style-type: none"> • Check to ensure the rain gauge stabilizer (plastic tab) has been removed from the bottom of the sensor. • Clear debris, such as leaves, out of the rain collector funnel and debris screen. • Calibrate the rain gauge (see separate AcuRite Iris® sensor manual). • Verify the sensor's internal tipping lever is moving freely by dripping a little water through the rain collector. You should hear the lever tipping. If you do not hear it, you may need to clean inside the sensor.

Troubleshooting Cont'd

Problem	Possible Solution
Inaccurate wind readings	<ul style="list-style-type: none">• What is wind reading being compared to? Pro weather stations are typically mounted at 30 ft high or more. Make sure to compare data using a sensor positioned at the same mounting height.• Check location of the sensor. Ensure it's mounted a minimum of 5 ft in the air with no obstructions around it (within several feet).• Ensure wind cups are spinning freely. If they hesitate or stop try lubricating with graphite powder or spray lubricant.
Display screen not working	<ul style="list-style-type: none">• Check that the batteries are installed correctly. Batteries may need to be replaced.• Reset the display by pressing and holding the RESET button, located in the battery compartment of the display. Date and time will need to be entered after a reset.

If your AcuRite product does not operate properly after trying the troubleshooting steps, visit www.acurite.com/support

Specifications

TEMPERATURE RANGE	Outdoor: -40°F to 158°F; -40°C to 70°C
	Indoor: 32°F to 122°F; 0°C to 50°C
OUTDOOR HUMIDITY RANGE	1% to 99%
WIND SPEED	0 to 99 mph; 0 to 159 kph
WIND DIRECTION INDICATIONS	16 points
RAINFALL	0.01 inches (0.25 mm) and up
WIRELESS RANGE	330 ft/ 100 m depending on home construction materials
OPERATING FREQUENCY	433 MHz
POWER	3 x AA alkaline batteries (required)
DATA REPORTING	Wind Speed: 18 second updates
	Direction: 36 seconds
	Outdoor temperature & humidity: 36 second updates
	Indoor temperature & humidity: 60 second updates

Customer Support

AcuRite customer support is committed to providing you with best-in-class service. **For assistance**, please have the model number of this product available and visit acurite.com/support.

- ▶ Installation Videos
- ▶ Register your Product
- ▶ Instruction Manuals
- ▶ Replacement Parts
- ▶ Submit Feedback & Ideas

IMPORTANT

PRODUCT MUST BE REGISTERED
TO RECEIVE WARRANTY SERVICE

PRODUCT REGISTRATION

Register online to receive 1-year warranty protection
www.acurite.com/product-registration

Limited 1-Year Warranty

AcuRite is a wholly owned subsidiary of Chaney Instrument Company. For purchases of AcuRite products, AcuRite provides the benefits and services set forth herein.

For purchases of Chaney products, Chaney provides the benefits and services set forth herein. We warrant that all products we manufacture under this warranty are of good material and workmanship and, when properly installed and operated, will be free of defects for a period of one year from the date of purchase.

Any product which, under normal use and service, is proven to breach the warranty contained herein within ONE YEAR from date of sale will, upon examination by us, and at our sole option, be repaired or replaced by us. Transportation costs and charges for returned goods shall be paid for by the purchaser. We hereby disclaim all responsibility for such transportation costs and charges. This warranty will not be breached, and we will give no credit for products which have received normal wear and tear not affecting the functionality of the product, been damaged (including by acts of nature), tampered, abused, improperly installed, or repaired or altered by others than our authorized representatives.

Remedy for breach of this warranty is limited to repair or replacement of the defective item(s). If we determine that repair or replacement is not feasible, we may, at our option, refund the amount of the original purchase price.

THE ABOVE-DESCRIBED WARRANTY IS THE SOLE WARRANTY FOR THE PRODUCTS AND IS EXPRESSLY IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED. ALL OTHER WARRANTIES OTHER THAN THE EXPRESS WARRANTY SET FORTH HEREIN ARE HEREBY EXPRESSLY DISCLAIMED, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTY OF MERCHANTABILITY AND THE IMPLIED WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE.

We expressly disclaim all liability for special, consequential, or incidental damages, whether arising in tort or by contract from any breach of this warranty. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

We further disclaim liability from personal injury relating to its products to the extent permitted by law. By acceptance of any of our products, the purchaser assumes all liability for the consequences arising from their use or misuse. No person, firm or corporation is authorized to bind us to any other obligation or liability in connection with the sale of our products. Furthermore, no person, firm or corporation is authorized to modify or waive the terms of this warranty unless done in writing and signed by a duly authorized agent of ours.

In no case shall our liability for any claim relating to our products, your purchase or your use thereof, exceed the original purchase price paid for the product.

Applicability of Policy

This Return, Refund, and Warranty Policy applies only to purchases made in the United States and Canada. For purchases made in a country other than the United States or Canada, please consult the policies applicable to the country in which you made your purchase. Additionally, this Policy applies only to the original purchaser of our products. We do not and do not offer any return, refund, or warranty services if you buy products used or from resale sites such as eBay or Craigslist.

Governing Law

This Return, Refund, and Warranty Policy is governed by the laws of the United States and the State of Wisconsin. Any dispute relating to this Policy shall be brought exclusively in the federal or State courts having jurisdiction in Walworth County, Wisconsin; and purchaser consents to jurisdiction within the State of Wisconsin.

FCC Information

This device complies with part 15 of FCC rules. Operation is subject to the following two conditions:

- 1- This device may NOT cause harmful interference, and
- 2- This device must accept any interference received, including interference that may cause undesired operation.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or

television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user authority to operate the equipment.

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation of the device.

ACU RITE®

www.AcuRite.com