

# Digital Travel Alarm Clock

model 47391



#### CONTENTS

Using the Alarm Clock 5
Care & Maintenance 5
Specifications5
FCC Information 5
Customer Support 6
Warranty 6

**Questions?** Contact Customer Support at (877) 221-1252 or visit www.**AcuRite**.com.

SAVE THIS MANUAL FOR FUTURE REFERENCE.



Congratulations on your new AcuRite product. To ensure the best possible product performance, please read this manual in its entirety and retain it for future reference.

## **Unpacking Instructions**

Remove the protective film that is applied to the LCD screen prior to using this product. Locate the tab and peel off to remove.

### **Package Contents**

- 1. Alarm Clock
- 2. Instruction Manual



### **Features & Benefits**



#### **DISPLAY UNIT FRONT**

- 1. •)) Zz Icon
  Indicates alarm enabled.
- AL Icon Indicates clock is in ALARM SET mode.
- 3. AM/PM Indicator
- 4. ALARM ON/OFF Switch
- Set Mode Switch
   Choose between TIME SET, RUN, and ALARM SET.

#### 6. SNOOZE/LIGHT Button

Press to silence the alarm or to activate the display backlight.

- 7. MINUTE Button
- 8. HOUR Button
- 9. Battery Compartment (not shown)

## **Clock Setup**

## **Install Battery**


- 1. Remove the battery compartment cover.
- 2. Remove insulated sheet between battery and metal terminal inside the battery compartment.
- 3. Replace the battery cover.

## **Replace Battery**

1. Remove the battery compartment cover.

 Insert 1 x L1154F button cell battery into the battery compartment, as shown. Follow the polarity (+/-) diagram in the battery compartment.

3. Replace the battery cover.

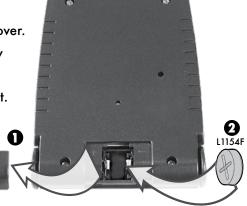

#### **Set the Time**

To set time, slide the SET switch to the TIME SET position.

To adjust the time, press and release the HOUR button to adjust hours or MINUTE button to adjust the minutes (press and HOLD to fast adjust).

To save your adjustments, slide the SET switch to the RUN position.





#### **Set the Alarm Time**

To set alarm time, slide the SET switch to the ALARM SET position. The AL indicator will appear on the display.

To adjust the alarm time, press and release the HOUR button to adjust hours or MINUTE button to adjust the minutes (press and HOLD to fast adjust).

To save your adjustments, slide the SET switch to the RUN position.

#### Alarm Clock ON or OFF function

To turn Alarm on: slide the ALARM ON/OFF switch to ON and the •)) icon appears on the screen.

To turn Alarm off: slide the ALARM ON/OFF switch to OFF and the •)) icon disappears from the screen.

## Alarm Clock SNOOZE function/Display Light

When the alarm is sounding, activate the 4 minute SNOOZE function by pressing the SNOOZE/LIGHT button. Press the SNOOZE/LIGHT button anytime to illuminate the display light.

#### Care & Maintenance

#### Clock Care

Clean with a soft, damp cloth. Do not use caustic cleaners or abrasives. Keep away from dust, dirt and moisture.

## **Specifications**

_	
POWER:	1 x L1154F battery (included)

#### **FCC Information**

This device complies with part 15 of FCC rules. Operation is subject to the following two conditions:

<sup>1.</sup> This device may NOT cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.
WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

#### **Customer Support**

AcuRite customer support is committed to providing you with best-inclass service. For assistance, please have the model number of this product available and contact us in any of the following ways:



(877) 221-1252



### Visit our website at www.AcuRite.com

- ▶ Installation Videos
- ► Register your Product
- Instruction Manuals
- ▶ Support User Forum
- ▶ Replacement Parts
- ► Submit Feedback & Ideas

## **IMPORTANT**

PRODUCT MUST BE REGISTERED TO RECEIVE WARRANTY SERVICE

#### **PRODUCT REGISTRATION**

Register online to receive 1 year warranty protection

www.AcuRite.com



## **Limited One Year Warranty**

At AcuRite, we proudly uphold our commitment to quality technology. Chaney Instrument Co. warrants that all products it manufactures to be of good material and workmanship, and to be free of defects when properly installed and operated for a period of one year from the date of purchase.

We recommend that you visit us at www.AcuRite.com for the fastest way to register your product. However, product registration does not eliminate the need to retain your original proof of purchase in order to obtain warranty benefits.

Chaney Instrument Co. warrants that all products it manufactures to be of good material and workmanship, and to be free of defects when properly installed and operated for a period of one year from the date of purchase. Remedy for breach of this warranty is limited to repair or replacement of the defective item(s). Any product which, under normal use and service, is proven to breach the warranty contained herein within ONE YEAR from date of sale will, upon examination by Chaney, and at its sole option, be repaired or replaced by Chaney. Transportation costs and charges for returned goods shall be paid for by the purchaser. Chaney hereby disclaims all responsibility for such transportation costs and charges. This

warranty will not be breached, and Chaney will give no credit for products it manufactures which have received normal wear and tear, been damaged (including by acts of nature), tampered, abused, improperly installed, damaged in shipping, or repaired or altered by others than authorized representatives of Chaney.

The above-described warranty is expressly in lieu of all other warranties, express or implied, and all other warranties are hereby expressly disclaimed, including without limitation the implied warranty of merchantability and the implied warranty of fitness for a particular purpose. Chaney expressly disclaims all liability for special, consequential or incidental damages, whether arising in tort or by contract from any breach of this warranty. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. Chaney further disclaims all liability from personal injury relating to its products to the extent permitted by law. By acceptance of any of Chaney's products, the purchaser assumes all liability for the consequences arising from their use or misuse. No person, firm or corporation is authorized to assume for Chaney any other liability in connection with the sale of its products. Furthermore, no person, firm or corporation is authorized to modify or waive the terms of this paragraph, and the preceding paragraph, unless done in writing and signed by a duly authorized agent of Chaney. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

For in-warranty claims: Chaney Instrument Co. 965 Wells St., Lake Geneva, WI 53147

# ACU>RITE







Temperature & Humidity



Weather Alert Radio



Kitchen
Thermometers
& Timers



Clocks

# It's more than accurate, it's ACUPRITE.

AcuRite offers an extensive assortment of precision instruments, designed to provide you with information you can depend on to Plan your day with confidence<sup>TM</sup>.

www.AcuRite.com