

www.AcuRite.com

BATTERY REQUIREMENTS: This product requires two "AAA" standard alkaline batteries (not included). DO NOT use heavy duty or rechargeable batteries.

WARNING: Batteries may pose a choking hazard, keep away from small children and animals.

INSTALL 2 AAA BATTERIES (not included): On the back of the unit, pry gently where indicated to OPEN the battery compartment. Install 2 AAA batteries according to the polarity markings in the battery compartment.

ON-DISPLAY READINGS: the display conveniently shows the current temperature and humidity readings of the main display housing location, and also displays the current PROBE temperature.

NOTE: The display temperature units can be toggled between °C/°F by DOUBLE CLICKING the FUNCTION BUTTON.

PLACE THIS MONITOR ANYWHERE INDOORS TO MONITOR TEMPERATURE AND HUMIDITY READINGS

The on-screen temperature and humidity readings can help you to make everyday decisions about the people, pets, or items inside your home. This device also features a 6 foot wired temperature probe that can be precisely positioned to monitor temperature in unique or hard to get to areas. The 6 foot cord and temperature probe are waterproof, so the probe can be submerged in liquid or in areas that are high humidity or may get wet. The cord can be routed carefully from indoors to outdoor so that the main unit may monitor outdoor temperature via the probe. You may utilize the included suction cup to adhere the probe to a smooth surface and keep it in place for precise monitoring.

Wi-Fi FEATURES

This device can be quickly and easily connected to your home Wi-Fi to provide information remotely, change or update select on-screen settings, view your home information from anywhere, and set and receive alerts right on your mobile device! You can also explore records and charts and share with friends and family members.

Wi-Fi SETUP (standard 2.4 GHz Wi-Fi network compatible)

To add your new device to your home Wi-Fi, begin by simply downloading the **AcuRite NOW** mobile app from the App store on your mobile phone. After creating your account, press the "+" (add device) button from the upper right on the main page. The AcuRite NOW app will guide you through adding your new device. Then, explore the features and start enjoying the convenience of being able to view data from your new device on your mobile phone anytime you want to!

SPECIFICATIONS


Wi-Fi REPORTING TO ACURITE NOW - REPORTING INTERVALS*

DISPLAY TEMPERATURE & HUMIDITY : change of $> 0.5^{\circ}$ / $> 5\%$ RH : IMMEDIATE UPDATE TO ACURITE NOW
change of $< 0.5^{\circ}$ / $< 5\%$ RH : **HOURLY** UPDATE TO ACURITE NOW

WIRED PROBE TEMPERATURE : (WHEN 14°F to 122°F) change of $> 1.5^{\circ}$: IMMEDIATE UPDATE TO ACURITE NOW
change of $< 0.5^{\circ}$: **HOURLY** UPDATE TO ACURITE NOW

WIRED PROBE TEMPERATURE : (ABOVE 122°F) change of $> 2^{\circ}$: IMMEDIATE UPDATE TO ACURITE NOW

TEMPERATURE RANGE	14°F to 140°F (-9.9°C to 60°C) - (indoor use)
HUMIDITY RANGE	0% to 99%RH - (indoor use)
PROBE TEMP. RANGE	-40°F to 248°F (-40°C to 120°C)
TEMPERATURE ACCURACY	+/- 1°C
POWER REQUIREMENTS	2 x AAA Alkaline Batteries
Wi-Fi COMPATIBILITY	2.4 GHz ONLY, requires a broadband connection

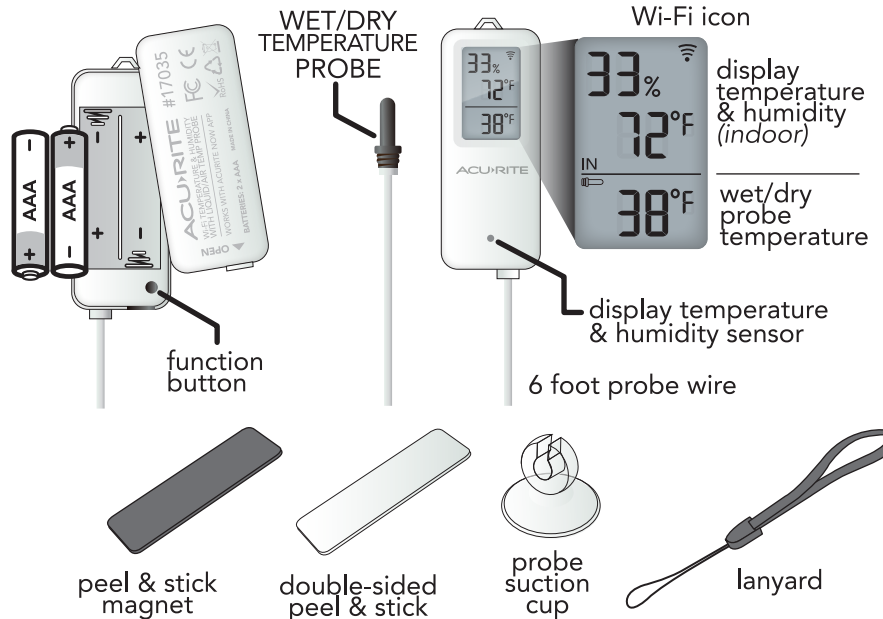

**THIS PRODUCT FEATURES A SECURE
Wi-Fi CONNECTION TO "AcuRite NOW"**



AcuRite NOW

**TO ENJOY THE FULL FEATURES AND
BENEFITS OF THIS PRODUCT,
DOWNLOAD THE "AcuRite NOW" APP
ON YOUR MOBILE PHONE**



17035 INST26 02272026



U.S. BASED SUPPORT
AcuRite.com/Support

* the device must be connected to the internet and to send updated data to AcuRite NOW

TROUBLESHOOTING**UNIT NOT
CONNECTING
TO Wi-Fi**

- Your internet router and display must be within range of each other. Relocate your display unit closer to your Wi-Fi router.
- Ensure the network name (SSID) and password you've entered are correct. NOTE: Both network name and password are case sensitive.
- Make sure DHCP is enabled on your router. Most routers have DHCP enabled by default.
- Ensure your router is broadcasting a 2.4 GHz network. The device only supports 2.4 GHz wireless (nearly all home routers broadcast 2.4 / 5 GHz by default)
- Try adding your display again utilizing the AcuRite NOW app on your mobile device. Download the App and follow the on-screen instructions.

**INACCURATE
READINGS**

- Make sure the unit is placed away from any unintended heat sources or vents
- Make sure the unit is positioned away from unintended moisture sources
- AcuRite products are factory calibrated to be within the possible accuracy range. What are you comparing readings with? If it is an older device, note that even though the readings of the comparable device may be trusted in the past, the readings typically drift out of accuracy over time.

**DISPLAY IS
DIFFICULT
TO READ OR
APPEARS TO
BE OFF**

- In low light areas, the display may be difficult to read.
- The display requires a constant source of power to operate continuously. Ensure the unit has fresh batteries and that they are correctly installed.
- The batteries could be low on power or completely dead. Note that alkaline batteries are recommended for use ABOVE 32°F, if this unit is being used below 32°F, LITHIUM batteries are recommended.
- The display itself may temporarily stop functioning or be dimmer below 32°F or above 95°F.
- There could also be excess condensation in areas that alternate between temperature extremes, which is considered a WET installation environment and is NOT recommended to place the DISPLAY UNIT in WET areas.

DISPLAY HOUSING FOR USE IN DRY ENVIRONMENTS. NO USER SERVICEABLE PARTS INSIDE.

CARE INSTRUCTIONS: Do not clean the unit with abrasive or corrosive compound. Wipe the unit with a soft, damp cloth. The housing and display are NOT WATERPROOF. DO NOT SUBMERGE IN WATER OR PLACE IN DISHWASHER. DO NOT PLACE PROBE/WIRE IN DISHWASHER OR IN CAUSTIC/CORROSIVE LIQUIDS OR MATERIALS. Do not subject the unit to excessive force, shock, dust, temperature, direct sunlight, heavy exposure to water or humidity which may result in malfunction, shorter electronic life span, battery damage or distorted parts. There are no user serviceable internal components, opening will void the warranty. THE PROBE IS NOT MADE OF FOOD SAFE MATERIALS, DO NOT USE PROBE TO MEASURE FOOD.

Limited 1-Year Warranty AcuRite is a business unit and brand of Combex, Inc. (referred to as "Combex," "we," "us," or "our" in this document. Chaney Instrument Company is also a business unit and brand of Combex. For purchases of both AcuRite and Chaney Instrument Company products, Combex provides the benefits and warranty services described below.

We warrant to the original purchaser that all products we manufacture under this warranty are of good material and workmanship and, when properly installed and operated, will be free of defects for a period of one year from the date of purchase (the "One Year Warranty"). Any product which, under normal use and service and after examination by us, fails to meet the One Year Warranty will, at our sole option, be repaired or replaced by us. Although, as explained below, in some cases a refund will be provided. Transportation costs and charges for returned goods shall be paid for by the purchaser. We hereby disclaim all responsibility for such transportation costs and charges. The One Year Warranty does not cover, and we will not repair or replace products which have received normal wear and tear not affecting the functionality of the product, been damaged (including by acts of nature), tampered, abused, improperly installed, or repaired or altered by anyone other than our authorized representatives.

The remedy under the One Year Warranty is limited to repair or replacement of the defective item(s). If we determine that repair or replacement is not feasible, we may, at our option, refund the amount of the original purchase price.

THE ONE YEAR WARRANTY IS NOT TRANSFERABLE AND IS THE SOLE WARRANTY FOR THE PRODUCTS AND IS EXPRESSLY IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED. ALL OTHER WARRANTIES OTHER THAN THE EXPRESS WARRANTY SET FORTH HEREIN ARE HEREBY EXPRESSLY DISCLAIMED, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTY OF MERCHANTABILITY AND THE IMPLIED WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE. WE EXPRESSLY DISCLAIM ALL LIABILITY FOR SPECIAL, CONSEQUENTIAL, OR INCIDENTAL DAMAGES, WHETHER ARISING IN TORT OR BY CONTRACT FROM ANY BREACH OF THIS WARRANTY. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU. WE FURTHER DISCLAIM LIABILITY FROM PERSONAL INJURY RELATING TO OUR PRODUCTS TO THE EXTENT PERMITTED BY LAW. BY ACCEPTANCE OF ANY OF OUR PRODUCTS, THE PURCHASER ASSUMES ALL LIABILITY FOR THE CONSEQUENCES ARISING FROM THEIR USE OR MISUSE. NO PERSON, FIRM OR CORPORATION IS AUTHORIZED TO BIND US TO ANY OTHER OBLIGATION OR LIABILITY IN CONNECTION WITH THE SALE OF OUR PRODUCTS. FURTHERMORE, NO PERSON, FIRM OR CORPORATION IS AUTHORIZED TO MODIFY OR WAIVE THE TERMS OF THIS WARRANTY UNLESS DONE IN WRITING AND SIGNED BY A DULY AUTHORIZED AGENT OF OURS.

IN NO CASE SHALL OUR LIABILITY FOR ANY CLAIM RELATING TO OUR PRODUCTS, YOUR PURCHASE OR YOUR USE THEREOF, EXCEED THE ORIGINAL PURCHASE PRICE PAID FOR THE PRODUCT.

Applicability of Warranty The One Year Warranty applies only to purchases made in the United States and Canada. For purchases made in a country other than the United States or Canada, please consult the warranties, if any, applicable to the country in which you made your purchase. As noted, the One Year Warranty applies only to the original purchaser of our products. We cannot and do not offer any return, refund, or warranty services if you buy products used or from resale sites such as eBay or Craigslist.

Governing Law The One Year Warranty is governed by the laws of the United States and the State of Wisconsin. Any dispute relating to the warranty shall be brought exclusively in the federal or State courts having jurisdiction in Walworth County, Wisconsin; and purchaser consents to jurisdiction within the State of Wisconsin.