 
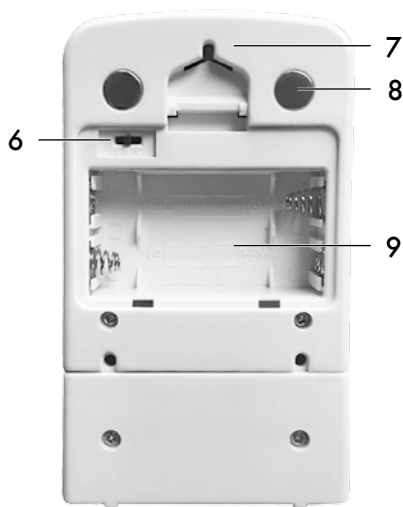 


Water Detector

model 01190

Congratulations on your new AcuRite product. Protect your property from potential water damage anywhere flooding is a potential danger.

Features & Benefits

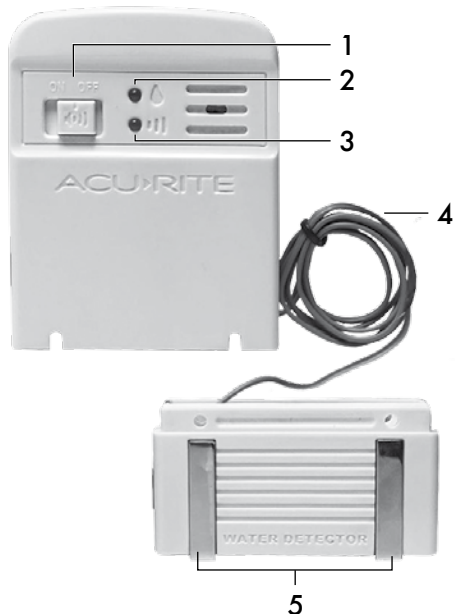

FRONT

- 1. Alarm ON/OFF Switch**
- 2. Moisture Indicator**
Indicates when moisture is detected.
- 3. Wireless Signal Indicator**
If applicable, flashes when data is being sent to Wireless Receiver.
- 4. 2.5-ft (.6m) Cord**
- 5. Sensor Contacts**
Detect the presence of liquid.

 
BACK

- 6. A-B-C Switch**
If applicable, ID code that must match Wireless Receiver's A-B-C switch to ensure units synchronize.
- 7. Integrated Hanger**
For easy placement.
- 8. Magnetic Backing**
- 9. Battery Compartment**
- 10. Battery Compartment Cover**
(not shown)

Questions? Contact Customer Support at (262) 729-4850 or visit www.AcuRite.com.

SAVE THIS MANUAL FOR FUTURE REFERENCE.

Water Detector Setup

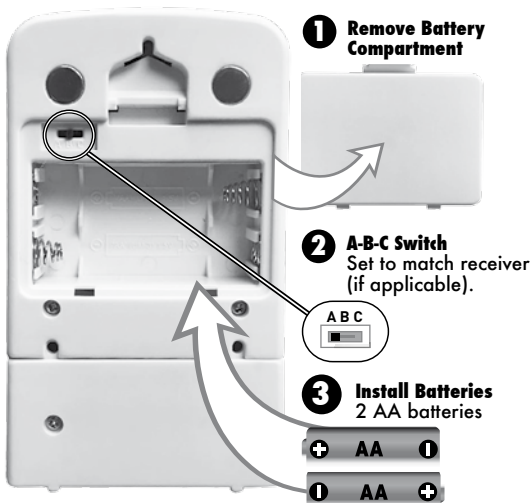

- 1** Remove the battery compartment cover.
- 2** If purchased with a Wireless Receiver, set the A-B-C switch located inside the battery compartment. You must select the same letter choices for both the detector and the receiver in order for the units to synchronize.
- 3** Insert 2 x AA batteries into the battery compartment as shown. Follow the polarity (+/-) diagram in the battery compartment.
- 4** Replace the battery cover.

Using the Water Detector

 
 
The Water Detector works as a stand-alone unit which can be placed where leaks may occur and has an audible alert when liquid is detected. It may also be used with a Wireless Receiver (sold separately) which can be placed in a living area, ensuring that you hear the alert.

Placement Guidelines

Water will naturally flow towards the low point of the area that is being monitored. For the best results, place Water Detector in an area where water is most likely to collect.

You may place the Water Detector upright in the desired location (Figure A), or mount the base with the wired sensor placed on ground level (Figure B).

NOTE: The sensor is water-resistant and is designed to detect the presence of liquid/leaks. However, to extend its life, place the Water Detector in an area where it will not remain submerged in liquid.

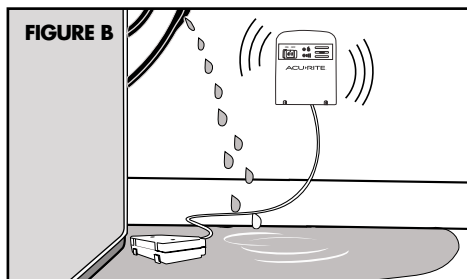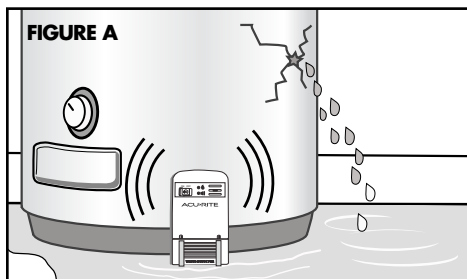


Specifications

POWER	2 x AA alkaline batteries
WIRELESS RANGE	330 ft / 100 m (depending on home construction materials)
CORD	2.5 ft (.6m) length; Water-resistant
DATA REPORTING	1 second updates once water is detected
SOUND INTENSITY	85 dB at 3.3 ft (1 meter)

Water Detector Wireless Receiver

model 01191 (sold separately)

 Features & Benefits

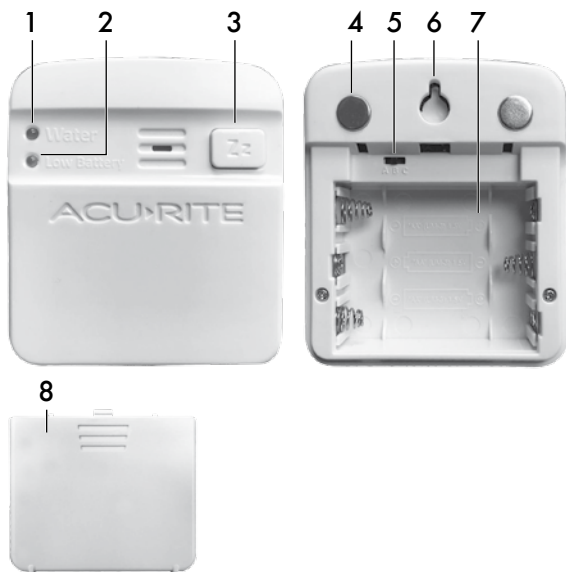

FRONT

- 1. Moisture Indicator**
Indicates when moisture is detected.
- 2. Low Battery Indicator**
- 3. Zz Button**
Press and release to silence the alarm for 1 hour. Press and hold 4 seconds to silence the alarm for 24 hours.

BACK

- 4. Magnetic Backing**
- 5. A-B-C Switch**
ID code that must match Water Detector's A-B-C switch to ensure units synchronize.
- 6. Integrated Hanger**
For easy placement.
- 7. Battery Compartment**
- 8. Battery Compartment Cover**

Receiver Setup

- 1** Remove the battery compartment cover.
- 2** Set the A-B-C switch located inside the battery compartment.
You must select the same letter choices for both the detector and the receiver in order for the units to synchronize.
- 3** Insert 3 x AA batteries into the battery compartment for the Receiver, as shown. Follow the polarity (+/-) diagram in the battery compartment.
- 4** Replace the battery cover.

Troubleshooting

Problem	Possible Solution
Alarm does not sound, even when there is liquid	<ul style="list-style-type: none"> • Check that the batteries are installed correctly. Batteries may need to be replaced. • Make sure the Alarm ON/OFF switch on the Water Detector is set to ON.
No Wireless Receiver reception	<p>If the wireless signal indicator does not flash:</p> <ul style="list-style-type: none"> • Relocate the Wireless Receiver and/or the Water Detector. The units must be within 100 m (330 ft) of each other. • Make sure the A-B-C switches on both units match.

Specifications


POWER

3 x AA alkaline batteries

If your AcuRite product does not operate properly after trying the troubleshooting steps, visit www.AcuRite.com or call (262) 729-4850 for assistance.

Customer Support

AcuRite customer support is committed to providing you with best-in-class service. **For assistance**, please have the model number of this product available and contact us in any of the following ways:

 (262) 729-4850

- ▶ Installation Videos
- ▶ Register your Product
- ▶ Replacement Parts
- ▶ Instruction Manuals
- ▶ Support User Forum
- ▶ Submit Feedback & Ideas

IMPORTANT

PRODUCT MUST BE REGISTERED
TO RECEIVE WARRANTY SERVICE

PRODUCT REGISTRATION

Register online to receive 1 year warranty protection

www.AcuRite.com

Limited 1-Year Warranty

AcuRite is a wholly owned subsidiary of Chaney Instrument Company. For purchases of AcuRite products, AcuRite provides the benefits and services set forth herein. For purchases of Chaney products, Chaney provides the benefits and services set forth herein.

We warrant that all products we manufacture under this warranty are of good material and workmanship and, when properly installed and operated, will be free of defects for a period of one year from the date of purchase.

Any product which, under normal use and service, is proven to breach the warranty contained herein within ONE YEAR from date of sale will, upon examination by us, and at our sole option, be repaired or replaced by us. Transportation costs and charges for returned goods shall be paid for by the purchaser. We hereby disclaim all responsibility for such transportation costs and charges. This warranty will not be breached, and we will give no credit for products which have received normal wear and tear not affecting the functionality of the product, been damaged (including by acts of nature), tampered, abused, improperly installed, or repaired or altered by others than our authorized representatives.

Remedy for breach of this warranty is limited to repair or replacement of the defective item(s). If we determine that repair or replacement is not feasible, we may, at our option, refund the amount of the original purchase price.

THE ABOVE-DESCRIBED WARRANTY IS THE SOLE WARRANTY FOR THE PRODUCTS AND IS EXPRESSLY IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED. ALL OTHER WARRANTIES OTHER THAN THE EXPRESS WARRANTY SET FORTH HEREIN ARE HEREBY EXPRESSLY DISCLAIMED, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTY OF MERCHANTABILITY AND THE IMPLIED WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE.

We expressly disclaim all liability for special, consequential, or incidental damages, whether arising in tort or by contract from any breach of this warranty. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

We further disclaim liability from personal injury relating to our products to the extent permitted by law. By acceptance of any of our products, the purchaser assumes all liability for the consequences arising from their use or misuse. No person, firm or corporation is authorized to bind us to any other obligation or liability in connection with the sale of our products. Furthermore, no person, firm or corporation is authorized to modify or waive the terms of this warranty unless done in writing and signed by a duly authorized agent of ours.

In no case shall our liability for any claim relating to our products, your purchase or your use thereof, exceed the original purchase price paid for the product.

Applicability of Policy

This Return, Refund, and Warranty Policy applies only to purchases made in the United States and Canada. For purchases made in a country other than the United States or Canada, please consult the policies applicable to the country in which you made your purchase.

Additionally, this Policy applies only to the original purchaser of our products. We cannot and do not offer any return, refund, or warranty services if you buy products used or from resale sites such as eBay or Craigslist.

Governing Law

This Return, Refund, and Warranty Policy is governed by the laws of the United States and the State of Wisconsin. Any dispute relating to this Policy shall be brought exclusively in the federal or State courts having jurisdiction in Walworth County, Wisconsin; and purchaser consents to jurisdiction within the State of Wisconsin.

©Chaney Instrument Co. All rights reserved. AcuRite is a registered trademark of the Chaney Instrument Co., Lake Geneva, WI 53147. All other trademarks and copyrights are the property of their respective owners. AcuRite uses patented technology. Visit www.AcuRite.com/patents for details.