


ACURITE


Wind Extension for AcuRite® Atlas™ Model 06072

COMPONENTS

1. Wind Assembly
2. AcuRite Atlas outdoor device

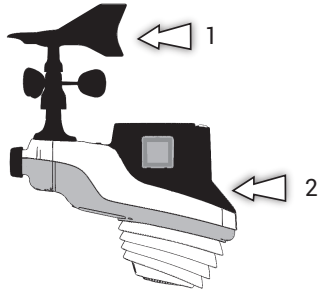

3. Extension Base

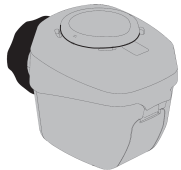

4. Extension Cord



5. Cord Connector-A




6. Cord Connector-B



7. Connection Compartment


8. Connection Compartment Door

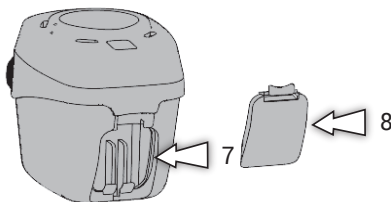

9. Rubber Guard




1. REMOVE THE WIND ASSEMBLY

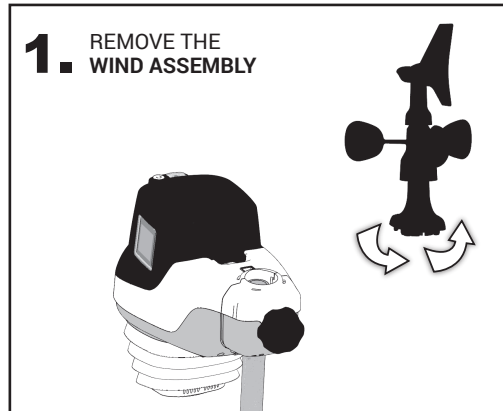


On the **AcuRite Atlas outdoor device**, hold the **Wind Assembly** firmly by the base, turn it counter-clockwise to unlock, and lift to remove. **Caution:** Do not lift or hold by the wind cups or wind vane.

3. OPEN CONNECTION COMPARTMENT DOOR

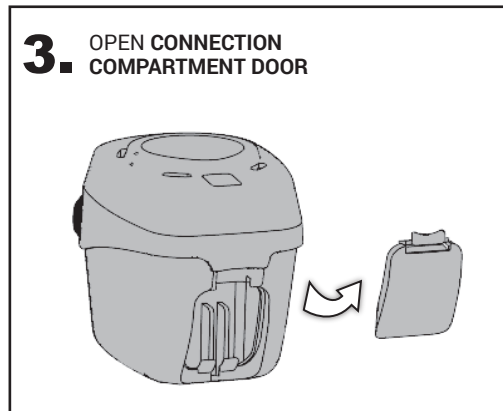


Open the **Connection Compartment Door** on the **Extension Base**.

5. PLUG CORD CONNECTOR-B INTO CORD CONNECTOR-A

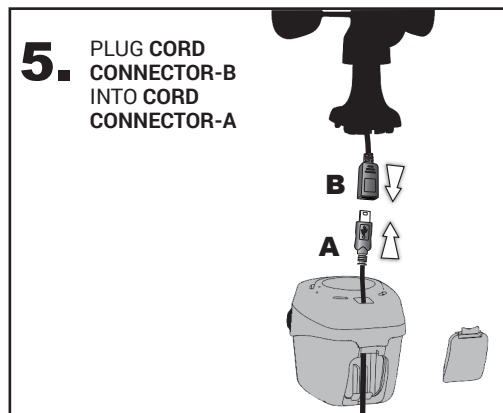


Plug **Cord Connector-B** into the **Wind Assembly's** connector.

2. UNPLUG THE CONNECTORS

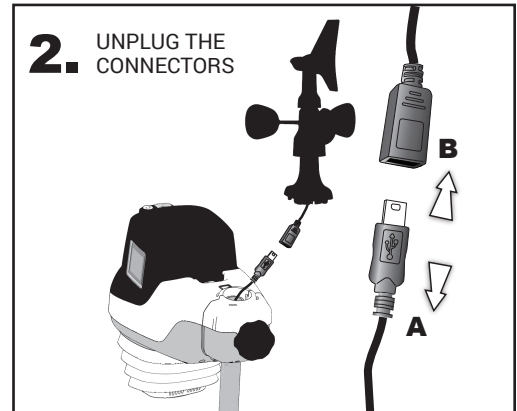


Unplug the connector between the **Wind Assembly** and **AcuRite Atlas**.

4. RUN CORD CONNECTOR-A THROUGH CONNECTION COMPARTMENT

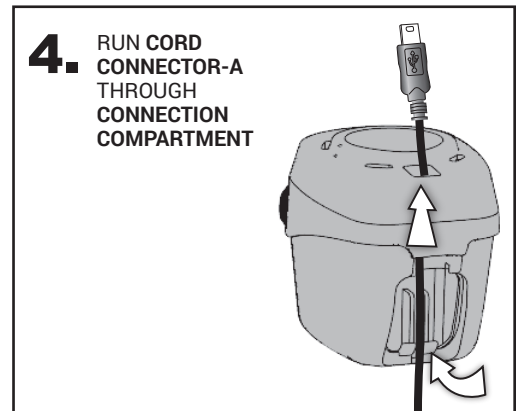

Run **Cord Connector-A** on the **Extension Cord** through the **Connection Compartment** in the **Extension Base**.

- 6.

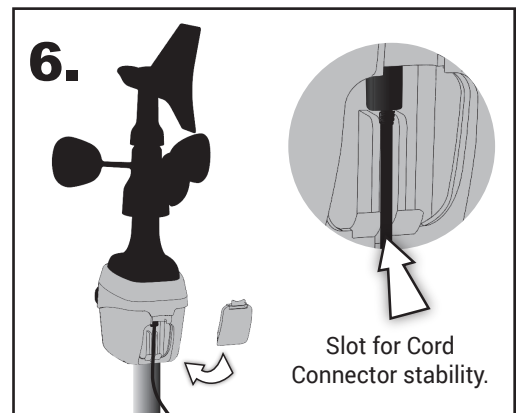

Combine the **Wind Assembly** with the **Extension Base** by turning the **Wind Assembly** clockwise, then firmly press the Connector into the strain relief slot in the **Connection Compartment** for stability. Then, close the **Connection Compartment**.

7. MOUNT THE EXTENSION BASE TO POLE


Face the Connection Compartment Door SOUTH



Mount the combined **Wind Assembly Extension Base** on a pole away from the **AcuRite Atlas outdoor device**, within range of the **Extension Cord**. The **Connection Compartment Door** should be facing south to maintain proper wind direction orientation.

- To maximize the accuracy of wind measurements, the National Weather Service recommends mounting anemometers 33 feet (10 meters) above ground.
- Avoid nearby wind obstructions such as trees and buildings.
- Be sure to mount the outdoor device securely, as swaying or shaking may cause inaccurate wind readings.


8. RUN EXTENSION CORD TO OUTDOOR DEVICE

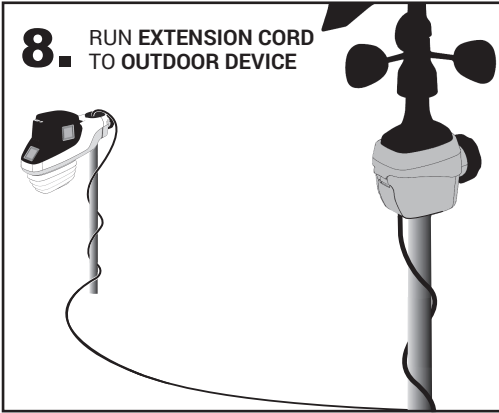

Run the **Extension Cord** from the **Extension Mount** to the **AcuRite Atlas outdoor device**, being sure to secure any extra slack. Be sure to distribute the slack, as wrapping the cord around itself several times in one location could cause interference.


9.

Cord Connector-B

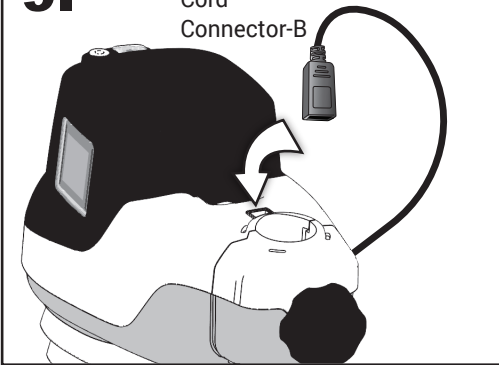

Plug **Cord Connector-B** into the **AcuRite Atlas outdoor device** connector.


10.

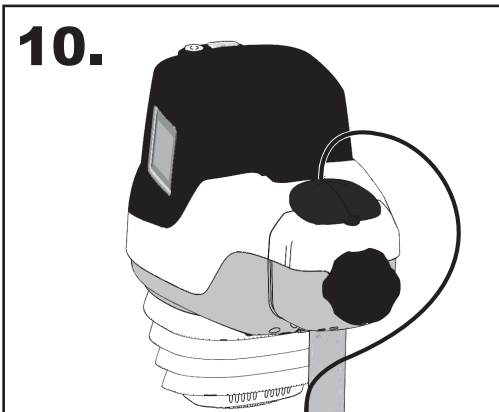

The **Rubber Guard** helps prevent water and debris from entering **AcuRite Atlas**. On the **AcuRite Atlas outdoor device**, tuck in the connected cord and place the **Rubber Guard** over the hole.

Optional:

If **AcuRite Atlas** is mounted on the same pole as the **Wind Extension**, the **Rubber Guard** can be cut to accommodate the pole's diameter. If needed, carefully cut a hole in the **Rubber Guard** just large enough to fit around the pole.

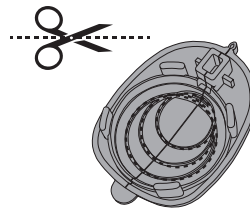

HAVING PROBLEMS? We're Here to Help.

Visit us online
www.AcuRite.com

Get more information or download the full **AcuRite Atlas™** product manual.

Contact Support
(877) 221-1252

Our friendly U.S. based support team is ready to assist you.

Limited 1 Year Warranty

AcuRite is a wholly owned subsidiary of Chaney Instrument Company. For purchases of AcuRite products, AcuRite provides the benefits and services set forth herein. For purchases of Chaney products, Chaney provides the benefits and services set forth herein. We warrant that all products we manufacture under this warranty are of good material and workmanship and, when properly installed and operated, will be free of defects for a period of one year from the date of purchase.

Any product which, under normal use and service, is proven to breach the warranty contained herein within ONE YEAR from date of sale will, upon examination by us, and at our sole option, be repaired or replaced by us. Transportation costs and charges for returned goods shall be paid for by the purchaser. We hereby disclaim all responsibility for such transportation costs and charges. This warranty will not be breached, and we will give no credit for products which have received normal wear and tear not affecting the functionality of the product, been damaged (including by acts of nature), tampered, abused, improperly installed, or repaired or altered by others than our authorized representatives.

Remedy for breach of this warranty is limited to repair or replacement of the defective item(s). If we determine that repair or replacement is not feasible, we may, at our option, refund the amount of the original purchase price.

THE ABOVE-DESCRIBED WARRANTY IS THE SOLE WARRANTY FOR THE PRODUCTS AND IS EXPRESSLY IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED. ALL OTHER WARRANTIES OTHER THAN THE EXPRESS WARRANTY SET FORTH HEREIN ARE HEREBY EXPRESSLY DISCLAIMED, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTY OF MERCHANTABILITY AND THE IMPLIED WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE.

We expressly disclaim all liability for special, consequential, or incidental damages, whether arising in tort or by contract from any breach of this warranty. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

We further disclaim liability from personal injury relating to its products to the extent permitted by law. By acceptance of any of our products, the purchaser assumes all liability for the consequences arising from their use or misuse. No person, firm or corporation is authorized to bind us to any other obligation or liability in connection with the sale of our products. Furthermore, no person, firm or corporation is authorized to modify or waive the terms of this warranty unless done in writing and signed by a duly authorized agent of ours.

In no case shall our liability for any claim relating to our products, your purchase or your use thereof, exceed the original purchase price paid for the product.

©Chaney Instrument Co. All rights reserved. AcuRite is a registered trademark of the Chaney Instrument Co., Lake Geneva, WI 53147. All other trademarks and copy-rights are the property of their respective owners. AcuRite uses patented technology. Visit www.AcuRite.com/patents for details.

QSG17_06072 101317