



## Wind Cups and Vane Replacement

### To Disassemble:


1. The wind vane is pressed onto the wind cups. Pull firmly to remove it.
2. The wind cups are pressed onto the shaft. Pull firmly to remove them.

### To Assemble:

3. To attach the wind cups, align them with the flat part on the shaft and press into place.

**Tip:** Place one drop of light machine oil or spray lubricant on the shaft to ensure the anemometer will spin freely.

4. Attach the wind vane by applying pressure to ensure it is properly secured to the shaft.

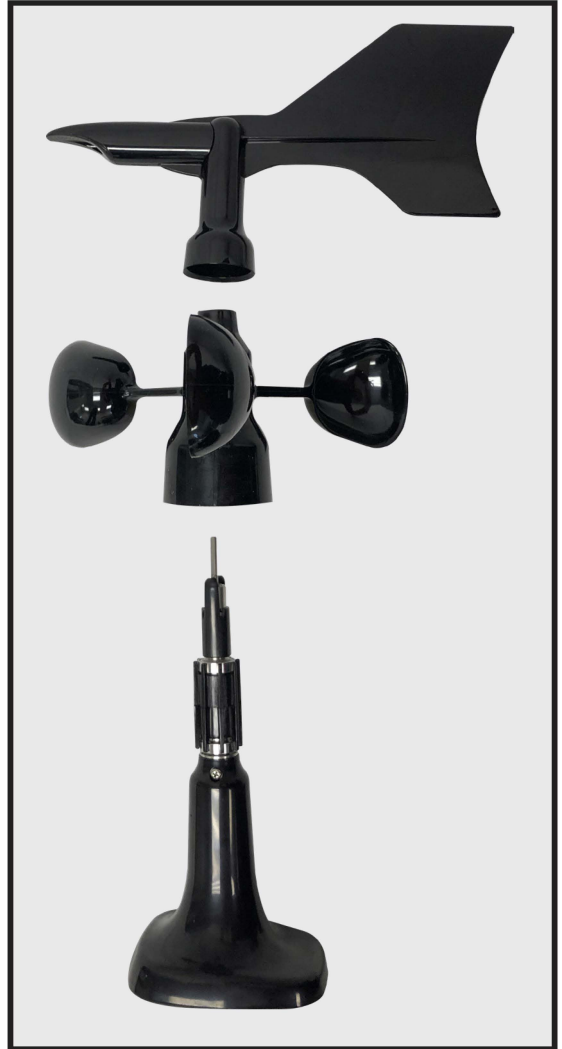

**Questions?** Contact Customer Support  
at [www.AcuRite.com/support](http://www.AcuRite.com/support)