

Intelli-Time® Alarm Clock model 13001 / 13002



CONTENTS

Unpacking Instructions	2	Troubleshooting	6
Package Contents	2	Care & Maintenance	6
Product Registration	2	Replace Intelli-Time® Battery ...	6
Features & Benefits	3	Specifications	7
Clock Setup	4	FCC Information	7
Intelli-Time® Clock	4	Customer Support	7
Set the Time & Date	4	Warranty	8
Using the Alarm Clock	5		

Questions? Contact Customer Support at (877) 221-1252 or visit www.AcuRite.com.

SAVE THIS MANUAL FOR FUTURE REFERENCE.

ACURITE®

Congratulations on your new AcuRite product. To ensure the best possible product performance, please read this manual in its entirety and retain it for future reference.

Unpacking Instructions

Remove the protective film that is applied to the LCD screen prior to using this product. Locate the tab and peel off to remove.

Package Contents

1. Alarm clock
2. Instruction Manual

IMPORTANT

PRODUCT MUST BE REGISTERED
TO RECEIVE WARRANTY SERVICE

PRODUCT REGISTRATION

Register online
to receive 1 year
warranty protection

www.AcuRite.com

SHOP NOW

SUPPORT

Support Forum

Archived Products


▶ Register a Product

Features & Benefits




FRONT OF CLOCK

1. PM Indicator
2. ALARM ON Indicator

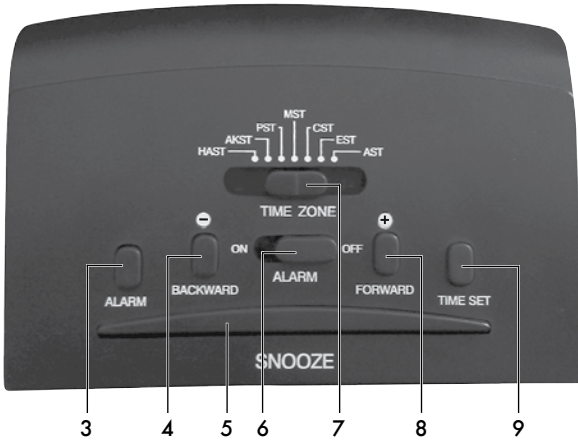

TOP OF CLOCK

3. ALARM Button
4. - BACKWARD Button
5. SNOOZE Button
6. ALARM ON/OFF Switch
7. TIME ZONE Selection Switch
8. + FORWARD Button
9. TIME SET Button

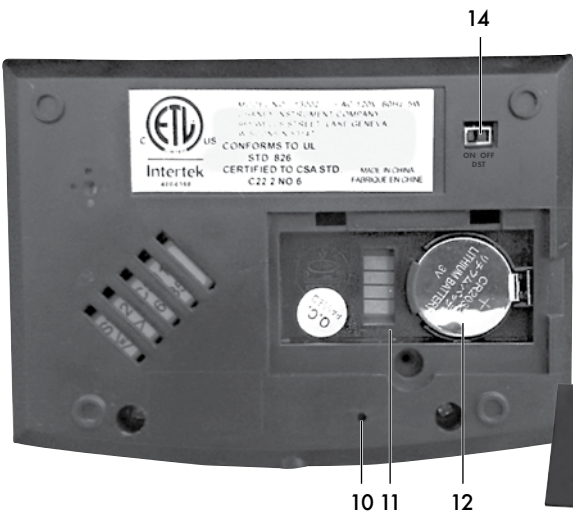

BOTTOM OF CLOCK

10. Reset Button
11. Battery Compartment
12. Intelli-Time® Battery
13. Intelli-Time® Battery Compartment Cover
14. DST ON/OFF Switch

Clock Setup

Plug the power cord into power outlet.

Intelli-Time® Clock

Intelli-Time clock and calendar are pre-programmed to the correct time and date, and update automatically for Daylight Saving Time. All you need to do is select your time zone using the "TIME ZONE" switch.

Set the Time & Date

Choose the correct time zone (HAST AKST PST MST CST EST AST) using the "TIME ZONE" switch on the top of the clock.

Set Daylight Saving Time ON or OFF using the "DST ON/OFF" switch on the bottom of the clock.*

Press and hold the "TIME SET" button for 3 seconds to enter the SET MODE. Once in the SET MODE the preference you are currently in will blink on the clock.

To adjust the currently selected (flashing) item, press and release the "+ FORWARD" or "- BACKWARD" buttons (press and HOLD to fast adjust). To save your adjustments, press and release the "TIME SET" button to adjust the next preference. The preference order is as follows:

CLOCK HOUR (Please note PM Indicator light)

CLOCK MINUTE

CLOCK MONTH

CALENDAR DATE

CALENDAR YEAR

You will automatically exit SET MODE if no buttons are pressed for 5 seconds. Enter SET MODE any time by pressing and holding "TIME SET" button for 3 seconds.

*If you live in an area that observes daylight saving time, DST should be set to ON.

Using the Alarm Clock

Set the Alarm Time

To set alarm time, press and release the "ALARM" button to enter ALARM SET MODE.

To adjust the currently selected (flashing) item, press and release the "+ FORWARD" or "- BACKWARD" buttons (press and HOLD to fast adjust).

To save your adjustments, press and release the "ALARM" button to adjust the next preference. The preference set order is as follows:

ALARM CLOCK HOUR (Please note PM Indicator light)

ALARM CLOCK MINUTE

You will automatically exit ALARM SET MODE if no buttons are pressed for 5 seconds. Enter ALARM SET MODE at any time by pressing the "ALARM" button.

Alarm Clock ON or OFF Function

To turn alarm on: Slide the "ALARM" switch to "ON". The Alarm On indicator will appear next to the word "ALARM" on the screen.

To turn alarm off: Slide the "ALARM" switch to "OFF". The Alarm On indicator will disappear next to the word "ALARM" on the screen.

Alarm Clock SNOOZE Function

The alarm will sound for 60 minutes before turning off when no button is pressed. When the alarm is sounding, activate the 8 minute SNOOZE function by pressing the SNOOZE button on top of the alarm clock. SNOOZE function can be activated up to 10 times before the alarm will no longer sound.

Troubleshooting

Clock won't turn on or displays partial numbers	<ul style="list-style-type: none">Reset the unit by pressing the reset button located on the bottom of the clock. This will reset the alarm to the original factory settings. Time and date will need to be entered after a reset.
Blinking Colon (dots)	<ul style="list-style-type: none">Blinking of the dots is a way that the seconds are counted. There is no way to stop the dots from blinking.
If your AcuRite product does not operate properly after trying the troubleshooting steps, visit www.AcuRite.com or call (877) 221-1252 for assistance.	

Care & Maintenance

Clock Care

Clean with a soft, damp cloth. Do not use caustic cleaners or abrasives. Keep away from dust, dirt and moisture. Clean ventilation ports regularly with a gentle puff of air.

Replace Intelli-Time Clock Battery

Intelli-Time technology is powered by a pre-installed coin-cell battery that stores the time and date settings. The battery has a shelf life of several years. To replace the Intelli-Time battery:

1. Locate the coin cell battery compartment door on the bottom of the clock. Unscrew and remove the compartment cover.
2. Insert 1 x CR2032 coin cell battery into the battery compartment, as shown. Install battery with "+" positive terminal facing OUT.
3. Screw in the battery cover.



WARNING: THIS PRODUCT CONTAINS A BUTTON-CELL BATTERY. IF SWALLOWED, IT COULD CAUSE SEVERE INJURY OR DEATH IN JUST 2 HOURS. SEEK MEDICAL ATTENTION IMMEDIATELY IF INGESTED.



Specifications

POWER	Power cord (120V)
--------------	-------------------

FCC Information

This device complies with part 15 of FCC rules. Operation is subject to the following two conditions:

1- This device may NOT cause harmful interference, and

2- This device must accept any interference received, including interference that may cause undesired operation.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, There is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment.

Such modifications could void the user authority to operate the equipment.

This device complies with Industry Canada licence-exempt RSS standard(s).

Operation is subject to the following two conditions:

(1) This device may not cause interference, and

(2) This device must accept any interference received, including interference that may cause undesired operation of the device.

Customer Support

AcuRite customer support is committed to providing you with best-in-class service. **For assistance**, please have the model number of this product available and contact us in any of the following ways:



(877) 221-1252



info@chaney-inst.com

24/7 support at www.AcuRite.com

- ▶ Installation Videos
- ▶ Register your Product
- ▶ Instruction Manuals
- ▶ Support User Forum
- ▶ Replacement Parts
- ▶ Submit Feedback & Ideas

IMPORTANT

PRODUCT MUST BE REGISTERED
TO RECEIVE WARRANTY SERVICE

PRODUCT REGISTRATION

Register online
to receive 1 year
warranty protection

www.AcuRite.com

▶ NOW

SUPPORT

Support Forum

Archived Products

▶ Register a Product

Limited One Year Warranty

At AcuRite, we proudly uphold our commitment to quality technology. Chaney Instrument Co. warrants that all products it manufactures to be of good material and workmanship, and to be free of defects when properly installed and operated for a period of one year from the date of purchase.

We recommend that you visit us at www.AcuRite.com for the fastest way to register your product. However, product registration does not eliminate the need to retain your original proof of purchase in order to obtain warranty benefits.

Chaney Instrument Co. warrants that all products it manufactures to be of good material and workmanship, and to be free of defects when properly installed and operated for a period of one year from the date of purchase. Remedy for breach of this warranty is limited to repair or replacement of the defective item(s). Any product which, under normal use and service, is proven to breach the warranty contained herein within ONE YEAR from date of sale will, upon examination by Chaney, and at its sole option, be repaired or replaced by Chaney. Transportation costs and charges for returned goods shall be paid for by the purchaser. Chaney hereby disclaims all responsibility for such transportation costs and charges. This

warranty will not be breached, and Chaney will give no credit for products it manufactures which have received normal wear and tear, been damaged (including by acts of nature), tampered, abused, improperly installed, damaged in shipping, or repaired or altered by others than authorized representatives of Chaney. The above-described warranty is expressly in lieu of all other warranties, express or implied, and all other warranties are hereby expressly disclaimed, including without limitation the implied warranty of merchantability and the implied warranty of fitness for a particular purpose. Chaney expressly disclaims all liability for special, consequential or incidental damages, whether arising in tort or by contract from any breach of this warranty. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. Chaney further disclaims all liability from personal injury relating to its products to the extent permitted by law. By acceptance of any of Chaney's products, the purchaser assumes all liability for the consequences arising from their use or misuse. No person, firm or corporation is authorized to assume for Chaney any other liability in connection with the sale of its products. Furthermore, no person, firm or corporation is authorized to modify or waive the terms of this paragraph, and the preceding paragraph, unless done in writing and signed by a duly authorized agent of Chaney. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

For in-warranty claims: Chaney Instrument Co.
965 Wells St., Lake Geneva, WI 53147

ACU>RITE®



Weather Stations



Temperature & Humidity



Weather Alert Radio



Kitchen Thermometers & Timers



Clocks

It's more than accurate, it's ACU>RITE.

AcuRite offers an extensive assortment of precision instruments, designed to provide you with information you can depend on to Plan your day with confidence™.

©Chaney Instrument Co. All rights reserved. AcuRite is a registered trademark of the Chaney Instrument Co., Lake Geneva, WI 53147. All other trademarks and copyrights are the property of their respective owners. AcuRite uses patented technology. Visit www.AcuRite.com/patents for details.