

Close Up

# ACURITE® Wind Vane



The wind vane is pressed onto the shaft, pull firmly to remove it.

To attach the wind vane, align the wind vane with the flat on the shaft and press into place